
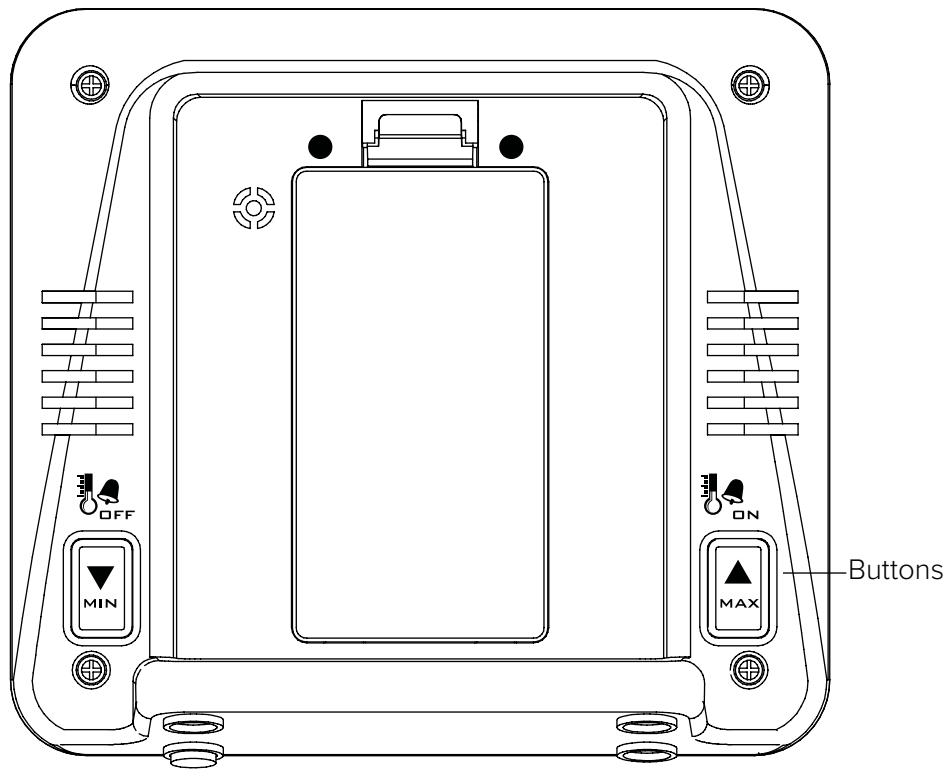


# LCD Features

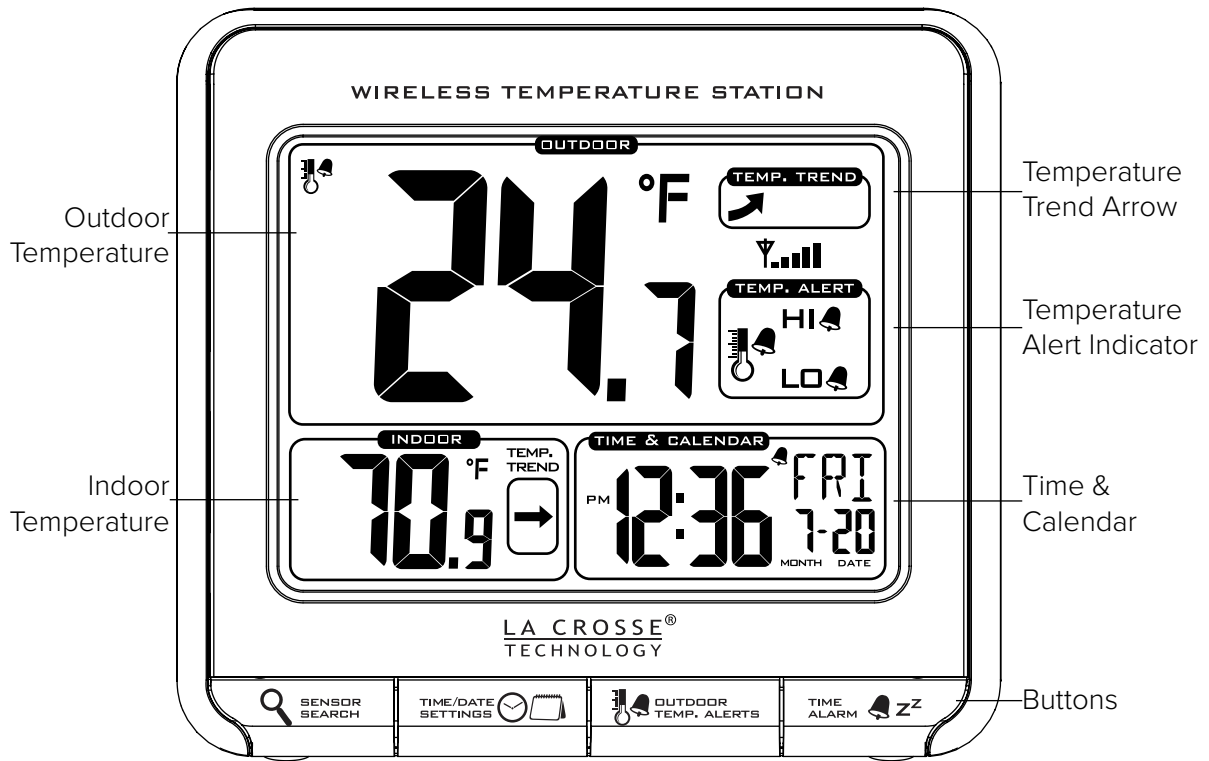

# Setting Menu

Hold the TIME/DATE button for three seconds to enter time set mode.

1. The **Year** will flash. Use the ARROW buttons to choose the year, and press the TIME/DATE button to confirm and move to the month.
2. The **Month** will flash. Use the ARROW buttons to choose the month, and press the TIME/DATE button to confirm and move to the date.
3. The **Date** will flash. Use the ARROW buttons to choose the date. Press the TIME/DATE button to confirm and move to 12/24 hour time format.
4. The time format 12H will flash. Use the ARROW buttons to choose 12-hour or 24-hour time format and press the TIME/DATE button to confirm and move to hour.
5. The **Hour** will flash. Use the ARROW buttons to choose the hour, and press the TIME/DATE button to confirm and move to minutes.
6. The **Minutes** will flash. Use the ARROW buttons to choose the minutes, and press the TIME/DATE button to confirm and move to Fahrenheit/Celsius.
7. **°F or °C** will flash. Use the ARROW buttons button to select Fahrenheit or Celsius. Press and release the TIME/DATE button to confirm and exit the program menu.

**Note:** When no buttons are pressed for ten seconds, the temperature station will save the last change and default back to normal mode.

## Set Temperature Alerts

**Note:** Setting the temperature alerts and arming the alerts are separate functions.

### **Set Alerts:**

1. Hold the TEMP ALERTS button until the station beeps.
2. The temperature alert value will blink in set mode.
4. Press the ▲ or ▼ button to adjust alert values.
3. Press the TEMP ALERTS button to confirm & move to the next alert.

### **The temperature alert order:**

- Outdoor High
- Outdoor Low

Press the TEMP ALERTS button to exit, or wait 10 seconds without pressing buttons to return to normal time display.

### **Arm/Disarm Temperature Alerts:**

Press & release the TEMP ALERTS button to select HI or LO temperature alert.

- Press the ▲ button to ARM temperature alerts.
- Press ▼ button to DISARM temperature alerts.
- The word HI or LO appears when armed.

