




USER MANUAL

Advanced Clean 3.0

SpaLet®

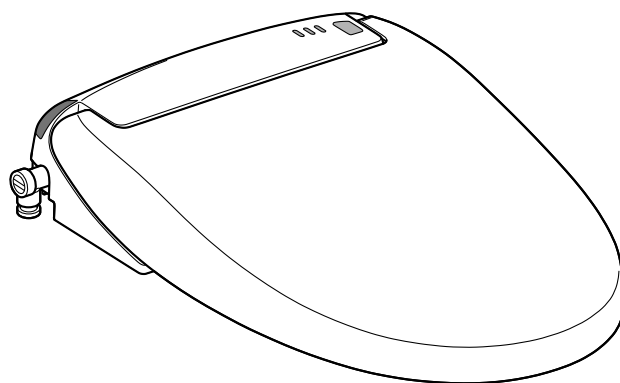

Thank you for purchasing this product.

After reading this manual, please keep it in a place where you can refer to it easily.

BE SURE TO FOLLOW THE SAFETY PRECAUTIONS.

Failure to follow the safety precautions may result in serious accidents in some circumstances.

Each of these items are extremely important for safety, and should be strictly observed.

In the event that an accident occurs as a result of improper usage, American Standard will assume no responsibility for damages.

©2018 AS America Inc.
SPALET is a trademark of AS America, Inc.

TABLE OF CONTENTS

Be Sure to Follow the Important Safeguards

| | |
|---------------------------|---|
| Important Safeguards..... | 1 |
|---------------------------|---|

Precautions for Preventing Failure

| | |
|----------------------------|---|
| Handling Precautions | 5 |
|----------------------------|---|

Please Read This First

| | |
|---|----|
| Names of Parts | 6 |
| Preparation and Checks Before Use | |
| 1. Open the Water shut-off Valve | 7 |
| 2. Insert the Power Plug Into the Outlet..... | 7 |
| 3. Operate the Spray..... | 9 |
| 4. Adjust the Temperature | 10 |
| Functions..... | 11 |

Operation

General Operation

| | |
|--|----|
| 1. Automatic Spray of Mist on the Toilet Bowl When a Person Sits on the SpaLet® Seat.... | 13 |
| 2. Auto Deodorizing Function..... | 13 |
| 3. Front and Back Cleansing | 15 |
| 4 Warm Air Dryer | 17 |

Useful Functions

| | |
|------------------------|----|
| Power Save..... | 18 |
| Comfort Features | 19 |

Useful Information

Other References 21

If You Have These Problems..... 22

If the Water in the Tank is Frozen 23

Preparing the SpaLet® Seat if not using for a long time 25

Cleaning and Maintenance

Cleaning and Maintenance 27

Cleaning SpaLet® Seats and Lids 29

Removing and Cleaning Seat Lids..... 30

Cleaning Nozzle Areas..... 34

Replacing Nozzle Tips..... 37

Dealing with Weak Deodorizing Effect 39

Dealing with Weak Nozzle Spray 40

Flashing Battery Level Indicator on the Remote Control 41

Disassembling Product and Installing It at Another Location Such as When Moving..... 42

Troubleshooting

Troubleshooting..... 43

Specifications

Specifications 50

BE SURE TO FOLLOW THE IMPORTANT SAFEGUARDS

Failure to follow the **IMPORTANT SAFEGUARDS** may result in serious accidents in some circumstances.

Each of these items are extremely important for safety and should be strictly observed.

In the event that an accident occurs as a result of improper usage, American standard will assume no responsibility for damages.

This product is assumed to be used by persons, such as elderly persons, persons with limited mobility or illness and children.

This product usage includes direct contact with the skin. To ensure proper usage of this product, please read the manual carefully before using it.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

When using the product - especially in the presence of children - you should always observe the following safety instructions.

Cannot be held liable for damages that are the result of disregarding these instructions.

In order to illustrate varying degrees of severity, the following terms are used:

DANGER Denotes an immediately hazardous situation, which may result in death or severe injury if not prevented.

WARNING Denotes a potentially hazardous situation, which may result in death or severe injury if not prevented.

CAUTION Denotes a potentially hazardous situation, that may result in mild to moderate injuries and/or damages to the product and/or other items and property if not prevented.



DANGER Risk of electric shock (risk of death!):



Improper connection of the power plug or socket can result in a risk of electric shock.



Do not install this product in a wet or damp location, such as inside a shower room or steam room, as this may lead to electric shock or fire.



Do not pour water or cleaning agents into or onto the back housing where electronics are stored. It could cause electric shock or fires.



Do not use while bathing.



Do not place or store product where it can fall or be pulled into a tub or sink.



Do not place in or drop into water or other liquid.



Do not reach for a product that has fallen into water. Unplug immediately.



WARNING Risk of burns, electric shock, fires and/or personal injury:



The device must be disconnected from the power supply for any and all installation and maintenance work and for repairs.

This also applies in the event that you find damages on the power supply line or on the product itself.

Please ensure this by

- setting the fuses (Breakers) of the electrical installation into the off position or
- by completely removing the screw-in fuses of the electrical installation or
- by completely pulling the power plug (if any) out of the wall socket.

When doing so, do not pull on the cord, but pull on the power plug instead.



Do not connect or disconnect the power plug with wet hands, as this may cause electric shock.



Hold the power plug when connecting or disconnecting it. If you hold the cord, the plug or cord may be damaged, resulting in electric shock or fire.



Disconnect the power plug periodically and clean it with a dry cloth, as dust accumulated on the power plug may cause fire



This product should only be connected to AC120V. Do not connect additional power cords to the SpaLet® seat's electrical outlet, as this may result in fire.



Completely insert the power plug into the electrical outlet, as failure to do so may cause electric shock or fire.



Do not use a loose outlet, as this may cause electric shock or fire.




Connect this product to a properly grounded outlet only. See Grounding Instructions.

BE SURE TO FOLLOW THE IMPORTANT SAFEGUARDS



GROUNDING INSTRUCTIONS:

This product should be grounded in the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

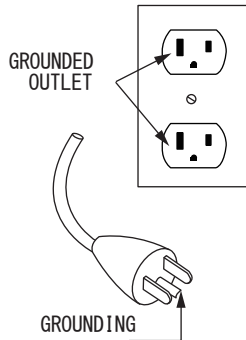

DANGER

Improper use of the grounding plug can result in a risk of electric shock.



If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided-if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.



Never use while sleeping or drowsy.



WARNING

Risk of burns, electric shock, fires and/or personal injury:



If the SpaLet® seat is used for a long period of time without setting the seat temperature to "OFF", the user may suffer a low-temperature burn. These precautions should especially be observed when any of the following use the SpaLet seat.

- Children
- Elderly persons
- Persons with an illness
- Persons with sensitive skin
- Persons on medication that may cause drowsiness
- Persons who are under the influence of alcohol
- Persons who are suffering from exhaustion



Check the temperature settings of the water and the dryer air before each use. Set the air dryer temperature to the lowest level if you intend to use this feature for a prolonged period of time. There is a risk of burns, if this feature is used for a prolonged period of time at high temperature settings. This applies particularly to the following people: children, the elderly, ill persons, persons with sensitive skin and those under the influence of alcohol and overly tired people.



Do not use outdoors and do not operate in a space where aerosol spray is used or concentrated oxygen is being administered. It may cause a malfunction or loss of glossiness.



Make sure that no items or foreign objects obstruct any openings (air outlets, hoses, etc.). Remove any obstructions immediately to prevent possible hazards and damages.



Observe the following instructions if you are using batteries.

- Make sure to use the right poles (+ /-) when inserting the batteries.
- Remove the batteries from the remote control if you won't use the SpaLet seat for an extended period of time.
- Do not leave expired batteries inside the remote control, as they can corrode which could cause damages to your health or the remote control.
- Batteries do not belong in the household waste! Discard batteries in compliance with your local regulations. Battery leakage may cause fire.
- Keep batteries away from children. Batteries are not toys. Contact a physician immediately in the event of a battery being swallowed accidentally.
- If your skin comes into contact with the liquid inside a battery, rinse immediately with copious amounts of water.
- If spilled battery fluid comes into contact with the eyes, immediately rinse with clean water without rubbing. The liquid can cause blindness. Talk to a doctor.

BE SURE TO FOLLOW THE IMPORTANT SAFEGUARDS



Be mindful of the following when handling batteries:

- Do not store batteries carelessly together with other metal objects (necklaces, hair pins etc.).
- Please do not mix new and old batteries, but remove both batteries at the same time as they will discharge otherwise. Only use batteries of the same type.
- Do not recharge batteries, short them, open or damage them by force and do not bring them into contact with fire, water or high temperatures. They could otherwise explode or leak and thereby cause damages.



Do not try to open or repair the SpaLet® seat on your own. Do not make modifications or install additional items. The SpaLet seat contains energized power lines. Upon being opened, there is a risk to your life! Repairs must only be performed with original replacement parts and accessories by certified electrician. Improper installation and maintenance work or repairs can create substantial hazards to the user.



Do not use near electronics and medical equipment with a weak signal. There is a danger that electrical malfunction may cause an accident.



Use this product only for its intended use as described in the manual. Do not use attachments not recommended by the manufacturer.



If water leaks from the SpaLet seat or the water supply line, disconnect the SpaLet seat from the power supply and close the water cutout valve. There is a risk of electric shock, fire and flooding.



If there is any indication of damages to the SpaLet seat, disconnect immediately from the power supply and contact the customer service.



This product should only be connected to a potable water supply line. Failure to do so will cause problems in the operation.



Keep the power supply cord away from heated surfaces. (e.g. surface radiators)



If there is a possibility of water freezing in the SpaLet seat, be sure to employ the "Preparing the SpaLet seat unit if not using for a long time procedure. Damage due to freezing may cause fire or flooding.



CAUTION

Risk of minor injuries and property damage:



 
For care of the plastic parts, use a mild detergent. There is a danger of electric shock, fire and/or injury due to damage to the plastic parts.



Do not use chlorine-based detergent, acidic detergent, or disinfectant for cleaning the ceramic parts. It may cause malfunction and damage due to the vaporized gas.



Make sure that the clamp ring is placed firmly onto the water supply hose. There is a risk of water spilling if the hose slips from the untightened clip.



Do not supply with water other than potable water. It may cause electric shock, fire and skin inflammation due corrosion of electronic parts inside the seat unit.



Do not stand on the lid or lean on the SpaLet seat. There is a risk of injury and damages to the device.





Keep flame sources away from the product. There is a risk of fire damage.





If you identify damage on the SpaLet seat, do not touch or plug in the SpaLet seat, do not touch these areas as there is a risk of personal injury. Contact Customer Service.


BE SURE TO FOLLOW THE IMPORTANT SAFEGUARDS


 Do not supply the SpaLet® seat with a hot water, or do not expose the SpaLet seat to any impact. There is a risk of injury from damaged parts. There is a danger of damage or water leakage


 Regularly inspect the device for visible damages. Damages on the device can pose a risk to your safety. Never switch on a damaged device.


 If you will not be using this product for a long time, close the water shut-off valve and drain the water from the SpaLet seat, and then, turn off the power at the power breaker or disconnect the power plug from the outlet. There is a danger of fire or flooding due to freeze damage. There is a danger of skin inflammation due to dirty water.


 When the device is used by children, the elderly or persons with mobility impairments you must ensure that they won't fall off. There is a risk of injury and damages to the device.


 The on-site electrical installation and connecting the device to the power mains must only be performed by authorized and qualified electricians, who are well versed in the locally applicable regulations and supplemental requirements and know the requirements of the local utility providers extensively. Improper installation and maintenance work or repairs can create substantial hazards to the user, for which we cannot be held liable.


 Do not apply impact to the clip ring or pull it when cleaning the SpaLet seat, as the clip ring may break and the water supply hose may come off, resulting in flooding.

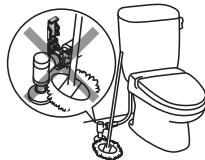


 Turn off the power at the power breaker or disconnect the power plug from the outlet when cleaning. Failure to do so may cause electric shock. (Ensure the power is turned on when using the nozzle cleaning function.)

 This product is not intended to be used by young children, persons with physical and/or mental disabilities, or persons lacking experiences and knowledge without the supervisions and instructions of the person responsible for the safety and understands possible hazards.

 Children shall not play with the product.

 Do not bend or crush the water supply hose, as this may result in water leakage and flooding.

 Note the following when using the strainer. If foreign materials are attached to the O-ring, it may cause flooding due to water leakage.


- Close the water shut-off valve when removing the strainer.
- When installing the strainer, tighten it fully so there is no gap.
- Check that the O-ring is free from foreign materials when attaching it.

SAVE THESE INSTRUCTIONS

PRECAUTIONS FOR PREVENTING FAILURE

HANDLING PRECAUTIONS

Do not expose the SpaLet® seat to direct sunlight. It can cause discoloration of the plastic parts. Direct sunlight can furthermore lead to the remote control and the sensor not working properly.

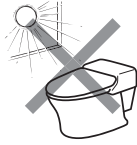

Do not open and close the SpaLet seat or lid roughly. It may cause malfunction of auto open/close, cracking or electrical leakage.



Do not pour water or cleaning agents onto the remote control. It could cause it to malfunction.



Never block the air openings of the product. It may cause malfunction.




Do not use electrical heaters in the vicinity of the SpaLet seat. It could cause discoloration of the plastic parts or fire.




Do not operate the remote control with wet hands. It could cause it to malfunction.

Names of Parts

Overview

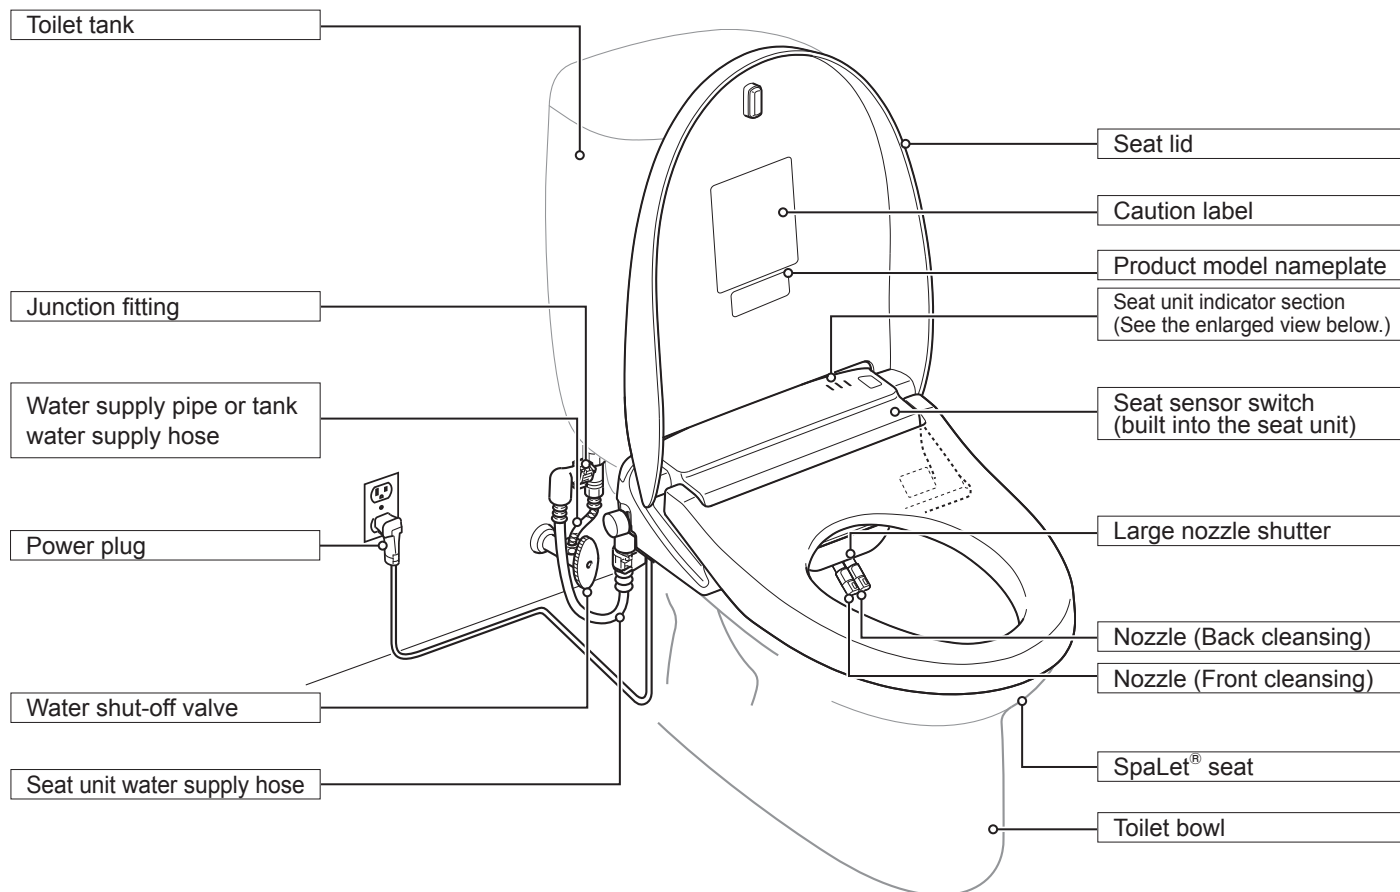


Seat Unit Indicator Section

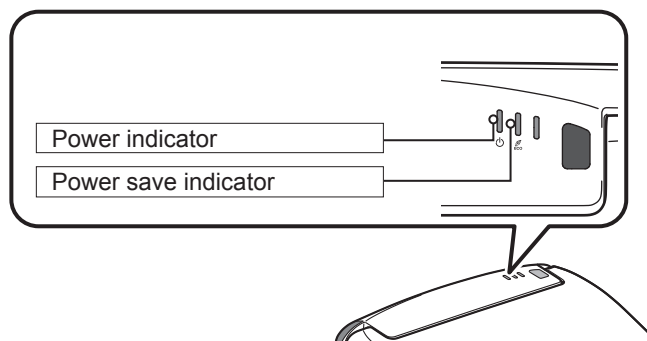


Deodorizing Filter

< Right side of seat unit >

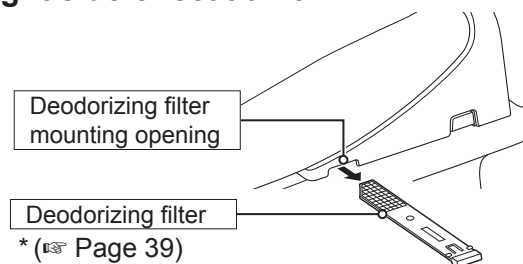


< Bottom side of the seat unit >

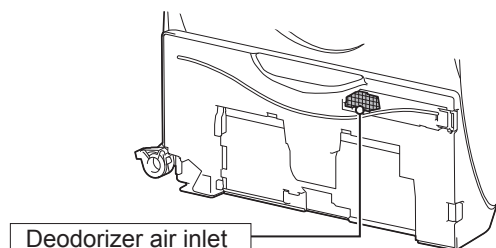


Strainer

< Left side of the seat unit >

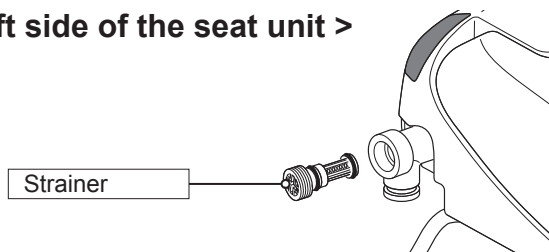


Names of Parts/Preparation and Checks Before Use

Vacuum Breaker

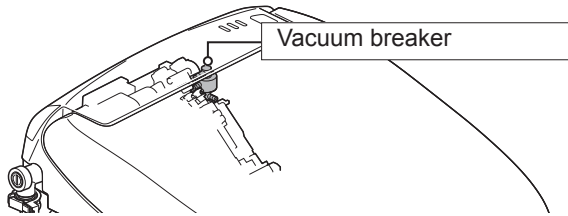

* The vacuum breaker is built into the seat unit. The vacuum breaker requires periodic inspection.

Mounting Plate and Lock Lever

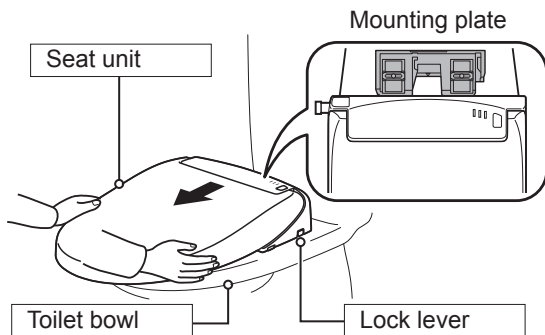

* The mounting plate is used to remove the seat unit from the toilet bowl for cleaning and maintenance. (Page 32)


STEP

1

Open the Water Shut-off Valve.

* If the water shut-off valve is closed, turn it counterclockwise to open.

If the valve is already open, its position has been adjusted. Be sure to set the valve to the original position if you turn it.

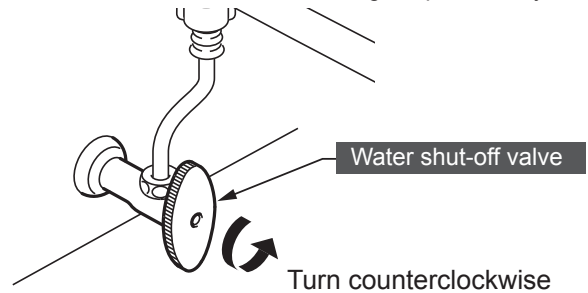


STEP


2

Insert the Power Plug Into the Outlet.

* Confirm that the power LED on the seat unit is lit.

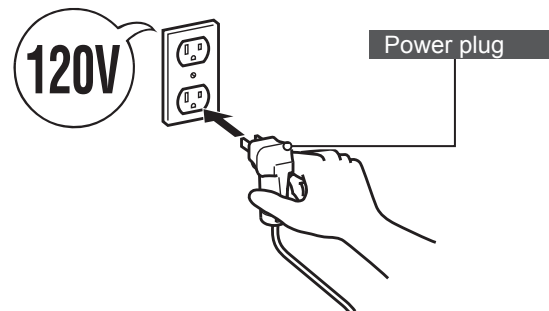

● Seat unit indicator section

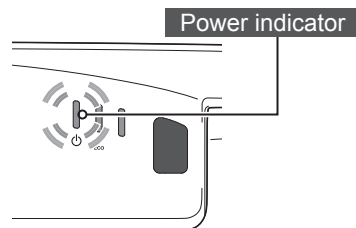

● Then check that the power LED lights.

* The power LED on the indicator lights (green).

If the power LED does not light, the main power may have been turned off. If "OFF" is displayed on the LCD, press Power button on the remote control.

⚠ WARNING



Grounding

Connect the grounding wire securely to the grounding terminal of the power outlet.

* Failure to observe this warning can result in electric shocks.

⚠ WARNING



Prohibited

- This product should be connected only to a 120-VAC power source.
- Do not use a multi-outlet socket.


* Failure to observe this warning may cause a fire.

[CAUTION]

- When disconnecting and reconnecting the power plug, wait for approximately 10 seconds before reconnecting.

Preparation and Checks Before Use

Remote Control

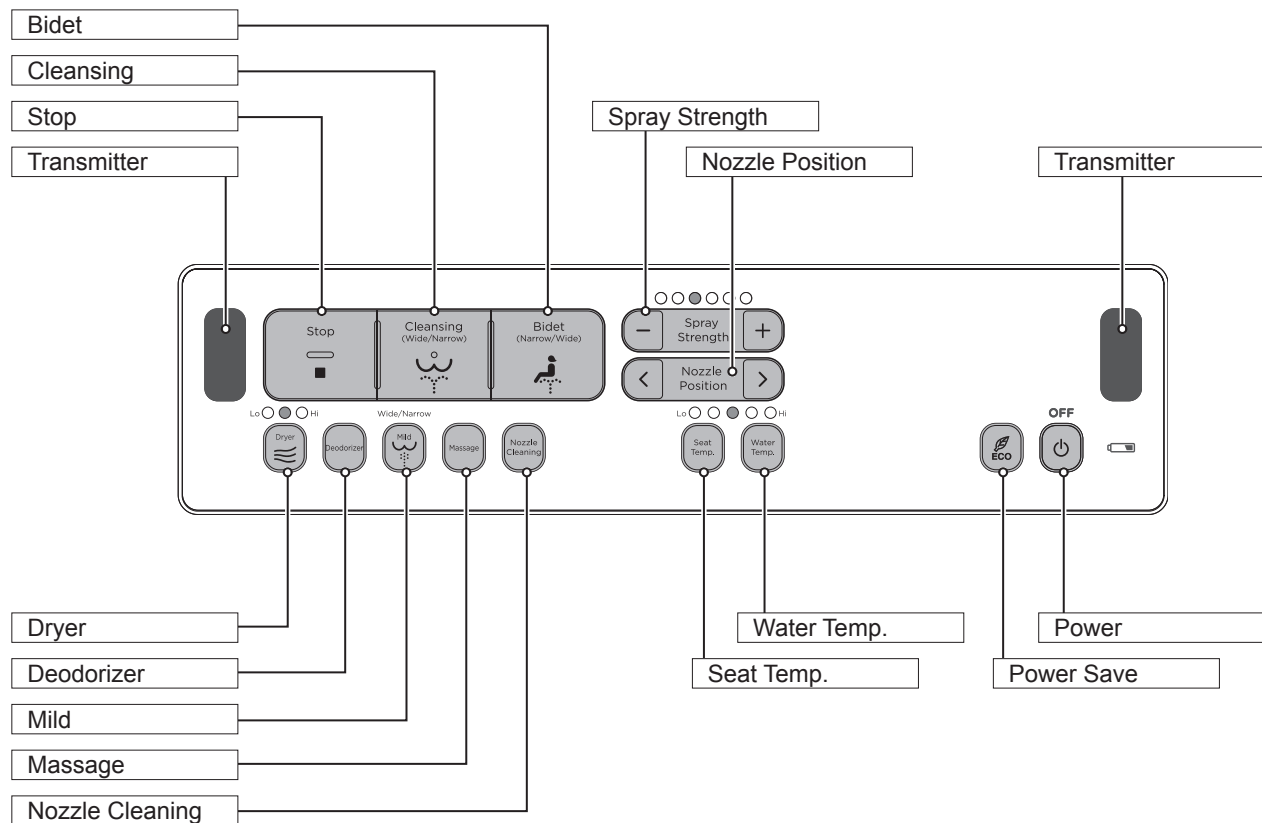

(Reference)

- All indicator LEDs will be lit for several seconds when the [Power] button on the remote control unit is turned ON.
- The OFF indicator LED will be lit for several seconds when the [Power] button on the remote control unit is turned OFF.
- The indicator LED will be off in several seconds after the button is operated.

Preparation and Checks Before Use

STEP

3 Operate the Spray

1 Roll up your sleeve and set your arm on the SpaLet[®] seat.

* The SpaLet seat is equipped with a seat sensor that detects the presence of someone sitting on the SpaLet seat.

The Spray and dryer will not function if the sensor is not triggered.


* Allow the spray to operate for approximately 30 seconds to bleed air in the water line during initial use.

2 Press the [Cleansing] button.

* At this time, water will discharge from around the nozzle as a preliminary operation.

3 Place a hand above the nozzle tip to block the sprayed water.


4 Press the [Stop] button to stop the SpaLet.

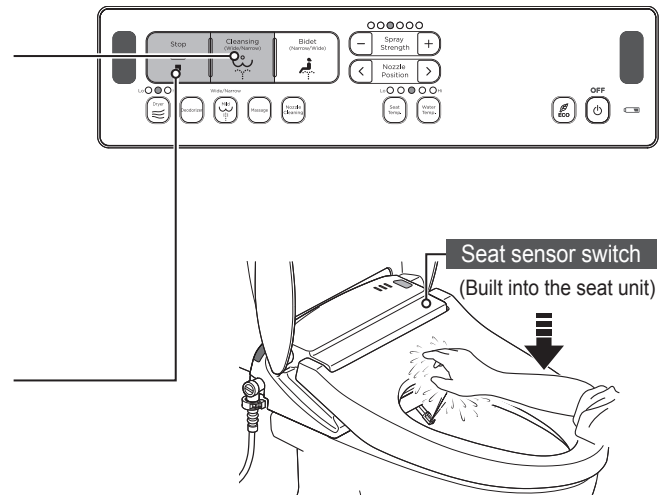

STEP**4****Adjust the Temperature**

- **Change the temperature**

* Press the corresponding switch to change the different temperatures.

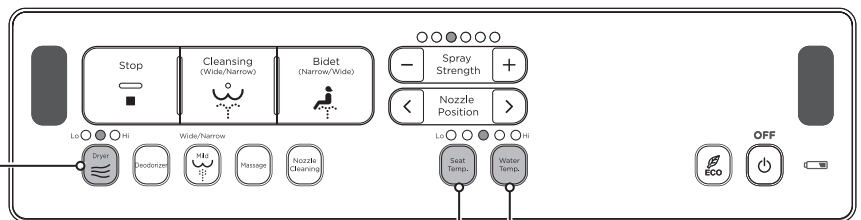**Seat Temp.**

* There are 6 levels of seat temperature available including "Off", "Low (approximately 82.4°F)", "High (approximately 96.8°F)", and the other levels between low and high. Select your temperature preference in accordance with the season.

Water Temp.

* There are 6 levels of water temperature available including "Off", "Low (approximately 89.6°F)", "High (approximately 104°F)", and the other levels between low and high. Select your temperature preference in accordance with the season.

Dryer Temp.

* There are 3 levels of drying temperature available including "Low", "Medium", and "High". (☞ Page 17)

⚠ WARNING**OBSERVE**

Be sure to set the seat temperature to the "OFF" setting when the SpaLet® seat will be used by the following types of users.

- Children
- Elderly persons
- Persons with illness
- Persons with limited mobility
- Persons with sensitive skin
- Persons who are taking medication that causes drowsiness
- Persons who are under the influence of alcohol
- Persons who are suffering from exhaustion

* Using the SpaLet seat for an extended period of time without turning off the seat heater may result in low-temperature burns.

(Reference)

- The SpaLet seat does not warm immediately. The seat heater should be turned on 10 to 15 minutes before use to ensure the desired temperature is reached for comfortable use.
- This SpaLet seat is equipped with a seat heater auto off function that automatically turns off the seat heater when the SpaLet seat is in use to prevent low-temperature burns. (☞ Page 19)
- The maximum seat temperature is 96.8°F for energy-saving purposes. The seat may feel cool depending on the usage environment.

❖ About Indicators

All indicator LEDs will be off if the button is left unoperated for several seconds. If the indicator LEDs are off while making settings, press the button again.

Functions

The product model number is indicated on the product model nameplate attached on the inner side of the seat lid (Page 6). Check the functions provided on your product.

| Cleansing Functions | | |
|-----------------------------------|-----|--|
| Bowl spray | ☞13 | Sprays mist on the bowl surface to minimize stains. |
| Nozzle shutter | ☞39 | Store the nozzles when not in use. Removable for easy cleaning. |
| Nozzle cleaning mode | ☞35 | Ejects the nozzles for easy cleaning. |
| Nozzle cleaning | ☞34 | Cleans the nozzles when the switch is operated. |
| Detachable nozzle tips | ☞37 | Nozzle tips can be replaced for added sanitation. |
| Easy-to-clean seat | - | There is no gap at the joints on the SpaLet® seat and the back side is made of stain-resistant material for easy cleaning. |
| Body slide attachment | ☞32 | The seat unit can be easily detached for easy cleaning of the areas facing the toilet bowl. |
| Front cleansing nozzle | - | The front cleansing nozzle is designed for comfortable use by women. |
| Self cleaning nozzle | ☞16 | Washes the nozzle before and after use. |
| One-touch seat lid removal | ☞30 | The seat lid can be easily removed for cleaning. |

| Power Save Function | | |
|-----------------------------|-----|--|
| Advanced power save | ☞18 | Saves energy by automatically lowering the SpaLet seat temperature when not in use. |
| One-touch power save | ☞18 | When the switch is operated, the heater turns off for a certain period of time to conserve energy. |
| Power switch | - | Manually operating this switch conserves energy. |

| Cleansing Functions | | |
|-----------------------------------|--------|--|
| Back Cleansing | ☞15-16 | Provides warm spray for back cleansing. |
| Wide Back Cleansing | ☞15-16 | Moves the nozzle back and forth for a wide-area cleansing. |
| Oscillating spray | ☞15-16 | Moves the nozzle back and forth rapidly to provide a pulsating effect. |
| Back massage cleansing | ☞16 | Alternates the water pressure between two levels to provide a pulsating effect. |
| Front Cleansing | ☞15-16 | Provides a low-pressure stream of water for gentle cleansing. |
| Wide Front Cleansing | ☞15-16 | Moves the nozzle back and forth to provide a gentle spray over a wide area. |
| Nozzle position adjustment | ☞16 | Allows the user to move the nozzle to provide a stream of water to a desired position. |

Comfort Functions

| | | |
|------------------------------|------|---|
| Warm air dryer | ☞ 17 | Provides warm air for quick drying. |
| Air shield deodorizer | ☞ 14 | Produces an air current to deodorize the inside of the toilet bowl thoroughly and powerfully. |
| Deodorizer-turbo | ☞ 14 | Provides a powerful deodorizing effect when the switch is operated. |
| Heated seat | ☞ 10 | Keeps the SpaLet® seat warm even on a cold day. |
| Slow-close seat | - | Convenient Slow-Close features prevents seat from slamming. |
| Seat heater auto-off | ☞ 19 | Turns off the SpaLet seat heater when a person sits on the seat. This prevents low-temperature burns. |
| Seat sensor | ☞ 21 | Prevents the product from operating unless a person is sitting on the SpaLet seat. |
| Remote control | - | The remote control is easy to see and allows operation in a comfortable posture. |

General Operation

STEP

1

Automatic Spray of Mist on the Toilet Bowl When a Person Sits on the SpaLet® Seat [Bowl Spray]

* This function is set to ON at the factory.

This function sprays mist onto the inside of the toilet bowl to minimize the adhesion of waste on the bowl surface.

* Mist is sprayed for approximately 6 seconds after a person sits on the SpaLet seat.

* If the user stands up and sits on the seat again, mist will not be sprayed for approximately 80 seconds.

* The mist spray area varies depending on the type and shape of the toilet bowl.

■ Disabling the bowl spray function


Press and hold the [Nozzle Cleaning] and [Seat Temp.] buttons simultaneously for at least 2 seconds.

* When the function is set to OFF, a long beep sound is produced.

* To set the function to ON again, press and hold the [Nozzle Cleaning] and [Seat Temp.] buttons simultaneously for at least 2 seconds.

(When the function is enabled, a beep sound is produced.)

[Nozzle Cleaning] + [Seat Temp.]

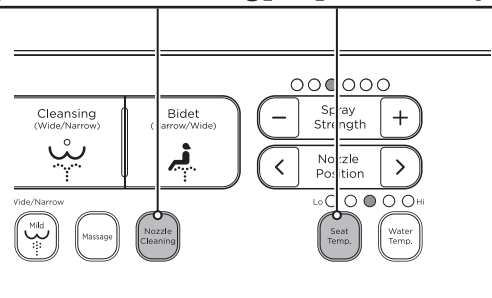

STEP

2

Auto Deodorizing Function [Air Shield Deodorizer]

1 The deodorizing process starts when a user sits down on the SpaLet seat.

The deodorizer fan activates to clear odor from inside the toilet bowl.



2 The deodorizing process stops once a user stands up.

The deodorizer fan stops automatically 1 minute after standing up.



(Reference)

- The automatic deodorizing function can be turned off. (Page 19)

Pressing the [Deodorizer] button on the remote control provides a more powerful deodorizing effect than the automatic deodorizing function.

1 Press the [Deodorizer] button while the automatic deodorizing function is in operation.


* When the function turns ON, a beep sound is produced

* The deodorizing fan operates in the Turbo mode and removes odor from the inside of the toilet bowl with higher performance.

2 To turn off the Deodorizer-turbo, press the [Deodorizer] button again.

* When the function is turned off, a long beep sound is produced.

* The deodorizing function changes from the Turbo mode to the normal automatic deodorizing function.

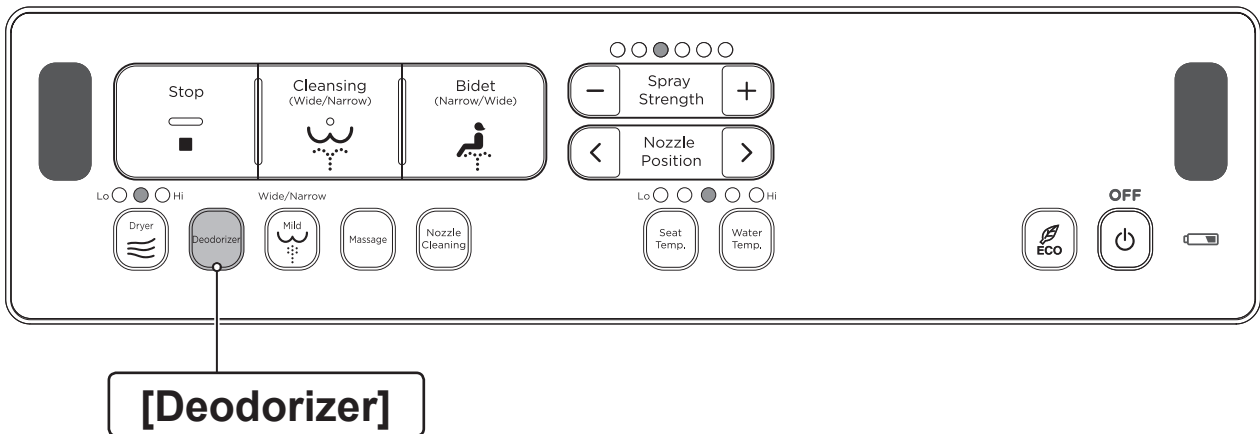

Setting the automatic deodorizing function to always operate in the Turbo mode


Press and hold the [Stop] and [Deodorizer] buttons simultaneously for at least 2 seconds.

* When the setting is made, a beep sound is produced.

* When the deodorizing function turns on, it always operates in the Turbo mode.

* To return the setting to OFF, press and hold the [Stop] and [Deodorizer] buttons simultaneously for at least 2 seconds.

(When the setting is set to OFF, a long beep sound is produced.)

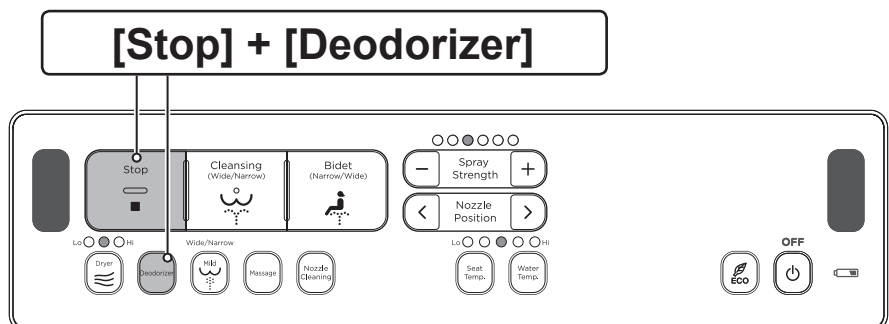

General Operation

STEP

3

Front and Back Cleansing

Back Cleansing - Mild ▶ Oscillating Spray ▶ Super Oscillating Spray

Front Cleansing ▶ Wide Cleansing ▶ Oscillating Spray - Super



1 Press the [Cleansing] button, [Mild], or [Bidet] button.

Back Cleansing functions wash any waste still remaining after a bowel movement.

Back Cleansing : Sprays water to wash

Back Cleansing - mild : Sprays water with less pressure for a more gentle wash

Front Cleansing functions wash any waste remaining during menstrual cycles or other circumstances. Keep cleansing times between 10 to 20 seconds.

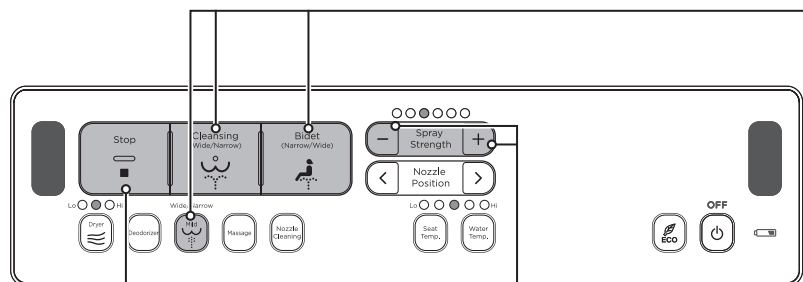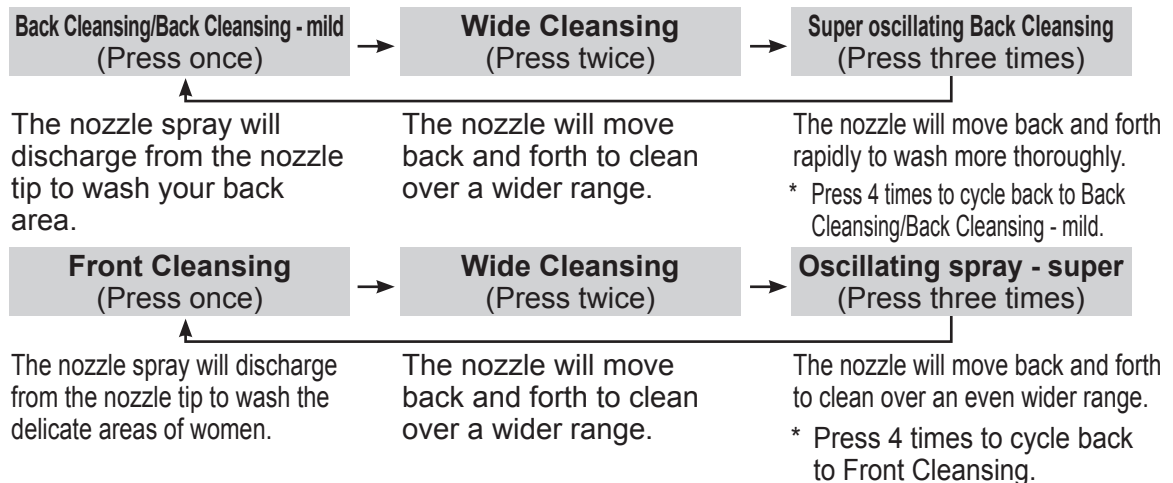

3 Press the [Stop] button to stop operation.

* This SpaLet® seat is equipped with an auto-stop function so that back cleansing and back cleansing - mild operation stops automatically after 2 minutes. Note that operation can be extended by an additional 2 minutes when other operations are performed while cleansing operations are ongoing, such as the massage and oscillating spray functions, for a total of 6 minutes maximum of cleansing before automatically stopping.

2 Press the [+] or [-] sides of the Spray Strength button to adjust the spray strength.

* There are 6 levels of spray strength available. Start with a low setting and then gradually increase the strength until the desired pressure is reached.
* To increase pressure: Press the [+] side of the button.
* To decrease pressure: Press the [-] side of the button.

Massage Cleansing


Water pressure varies between a stronger and weaker pressure during back cleansing or back cleansing - mild operation to provide a pulsating effect during the wash.

* The massage function does not operate during front cleansing operation.

* The pulsating effect will be felt differently by each person.

1 Press the [Massage] button during back cleansing or back cleansing - mild operation.

2 Press the [Massage] button again to stop the massage operation.

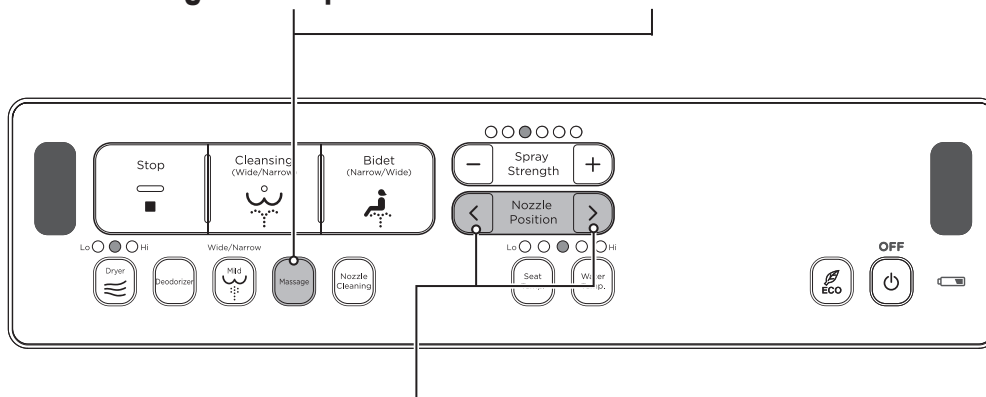


Nozzle Position

The nozzle position can be adjusted back and forth during front cleansing, back cleansing and back cleansing - mild operation

● Press the "<" or ">" sides of the Nozzle Position button.

- * There are 5 nozzle positions available.
- * These positions include the default position, two front positions, and two back positions.
- * The position resets to the default position when standing up from the SpaLet® seat.
- * To move the nozzle position forward: "<"
- To move the nozzle position backward: ">"

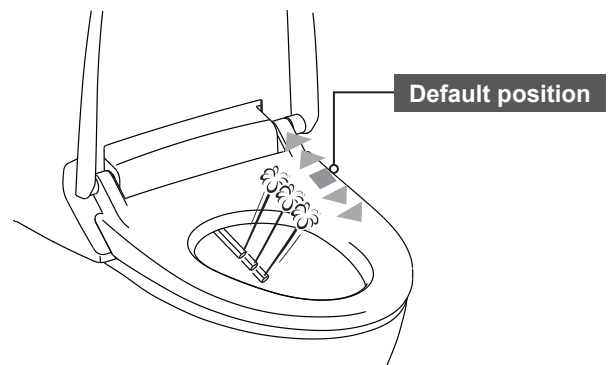

❖ Self-cleaning nozzle

This SpaLet seat is equipped with a self-cleaning nozzle function that automatically washes the nozzle before and after cleansing.

❖ Water discharges from a point near the nozzle tip

When sitting on the SpaLet seat or pressing any cleansing button, water discharges from a point near the nozzle tip in preparation to spray warm water. It may take some time for the water to warm in cold regions or during winter.

Water discharges from a point near the nozzle tip immediately after a user sits down on the SpaLet seat as well as before and after cleansing. This is required for the function and is not indicative of a failure.

(☞ Page 22)

[CAUTION]

- The nozzle spray may weaken during winter or other times when the water temperature is significantly low.
- Sit further back on the SpaLet seat. Less water will splash if you sit further back on the seat.
- Back cleansing and back cleansing - mild operation will stop if the SpaLet seat is flushed during this operation.
- Do not wash or rinse for extended periods of time. Do not wash internal parts of the body.
 - * Doing so may rinse away normally present bacteria and cause an internal imbalance.
- Follow your doctor's instructions on use if you are receiving treatment or medical care for areas affected by use of this product.

General Operation

STEP

4


Warm Air Dryer

Warm Air Drying

Warm air is blown to dry the area washed by the nozzle spray.

* The front cleansing nozzle extends and pushes the nozzle shutter down during the warm air drying operation.

- **Press the [Dryer] button.**
 - * There are three levels of air temperature available.
 - * The deodorizer function stops temporarily during the drying operation.
- **Press the [Stop] button to stop operation.**

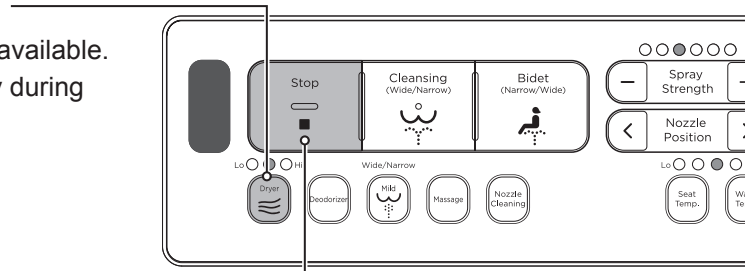

Changing Air Temperature

Press the [Dryer] button again while drying.

- * Every time the button is pressed, the air temperature and indicator LED will make a level change from Medium to High, High to Low, and back to Medium again.
- * The indicator LED will be off in several seconds.
- * When the dryer is stopped, the setting will return to the initial setting.



⚠ WARNING



OBSERVE

Be sure to set the drying temperature to the "Low" setting when the SpaLet® seat will be used by the following types of users.

- Children
- Elderly persons
- Persons with illness
- Persons with limited mobility
- Persons with sensitive skin
- Persons who are taking medication that causes drowsiness
- Persons who are under the influence of alcohol
- Persons who are suffering from exhaustion

* Using the dryer for an extended period of time at some other setting may result in burns.

(Reference)

- After cleansing, you can dry faster by wiping gently with toilet paper to remove water drops before pressing the [Dryer] button.

❖ Warm air drying

This SpaLet seat is equipped with an auto-stop function so that operation stops automatically after 4 minutes.

Power Save



The power save function includes the one-touch power save (8 hours) option and the advanced power save (always on) option. Using one-touch power save together with advanced power save is even more effective at reducing energy consumption. This function is turned off by default.

One-touch Power Save (8 Hours)

Press this switch when the SpaLet® seat will not be used for an extended period of time, such as at night, to turn off the SpaLet seat heater for 8 hours and reduce power consumption. The previous settings will be restored after 8 hours elapse.

● Press the [Power Save] button.

- * Each pressing of the [Power Save] button toggles between the power-saving modes.
- * The Power Save indicator in the LCD turns on when the function is enabled.

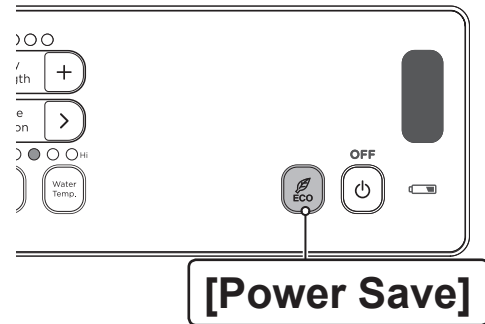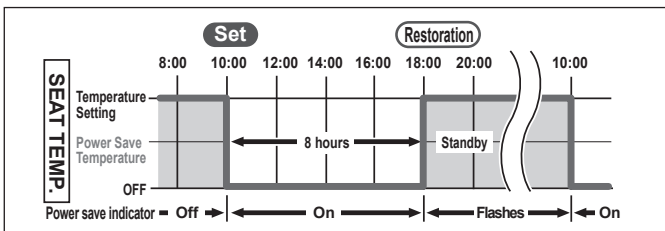

- * The one-touch power save option can be activated twice per day.
- * Once 8 hours elapse, the previous settings are automatically restored, and the Power Save indicator begins to flash.



(Reference)

- The one-touch power save setting would be back to default setting after power outage or when the power plug has been disconnected from the outlet.



Advanced Power Save (Always On)

This function lowers the water temperature when the SpaLet seat is not in use to reduce power consumption.


* Power is saved at all times while the SpaLet seat is not in use.

● Press and hold both the [Nozzle Cleaning] and [Power Save] buttons for at least 2 seconds.

- * The power saving mode is changed each time the [Power Save] and [Nozzle Cleaning] buttons are both pressed and held for at least 2 seconds.
- * The Power Save indicator in the LCD flashes when the function is enabled.

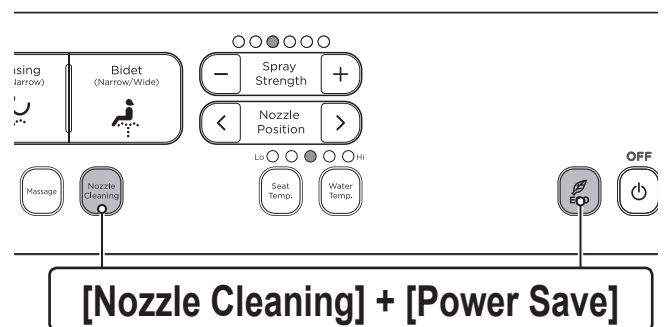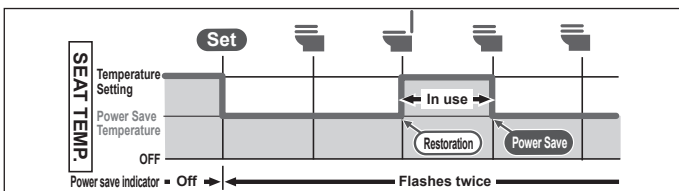

- * When used in combination with the one-touch power save option, the Power Save indicator on the LCD turns on while the one-touch power save option is in effect for 8 hours. The Power Save indicator flashes twice during the 16 hours of one-touch power save standby.

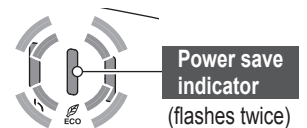

(Reference)

- When the power save function is activated, the water temperature is lowered, which may feel cool to the touch. In this case, cancel the power save function.
- Leaving the seat lid closed is still an effective way to conserve power when the power save function is turned off.

Comfort Features

Favorite Settings

You can change various settings.


Press and hold the indicated operation buttons for at least 2 seconds to change settings.

| Function | | Control Method |
|----------------------|--|--|
| Deodorizer | You can turn the deodorizer on and off. | [Water Temp.] + [Nozzle Cleaning] |
| Seat heater auto off | The heater can be automatically turned off when a user sits down on the SpaLet® seat to help prevent low-temperature burns. * Continuing to use the SpaLet seat while this function is enabled may result in the SpaLet seat feeling lukewarm or cool. * Once the user stands up, the seat will again be warmed to the configured temperature. | [Seat Temp.] + [Power Save] |
| Operation tone | The remote control operation sound that is triggered when operating the remote control can be turned off. | [Deodorizer] + [Seat Temp.] |

Restoring the Default Settings

If the settings of this product have been changed using the operation as described in "Useful Functions", all settings can always be reset to the default settings whenever desired.

Press and hold both the [Nozzle Position <] and [Power Save] buttons for at least 2 seconds.

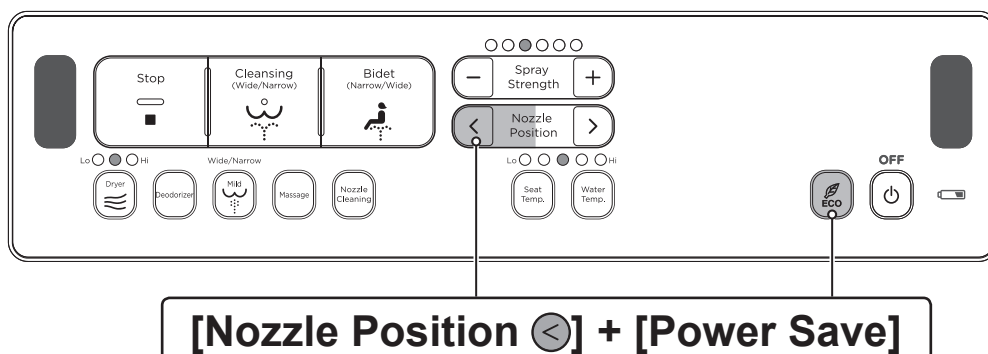

■ Default settings

The following table lists the default settings.

| Function | | Default Setting |
|--------------------------------|-------------------------|-----------------|
| Deodorizer | Automatic deodorizing | ON |
| Power Save | One-touch power save | OFF |
| | Advanced power save | OFF |
| Water temp. | | Low |
| Seat temp. | | Low |
| Seat heater auto off | | OFF |
| Drying | Startup air temperature | Medium |
| Remote control operation sound | | ON |
| Intermittent nozzle drain | | OFF |

Storing Settings Changes

Settings changes are stored and therefore not lost when the power plug is disconnected from the outlet or the power switch is turned off.

Note that the one-touch power save settings are reset when the power plug is disconnected from the outlet.

(☞ Page 18)

Other References

The SpaLet® Seat Temperature is Adjusted to Set Levels.

The temperature of the SpaLet seat is maintained at constant temperatures in accordance with the temperature set with the switch.

Seat temp.


Off (room temperature) and Low (approx. 82.4°F) to High (approx. 96.8°F)

Nozzle Spray in Winter.

The nozzle spray may weaken or take longer than usual to discharge during winter or other times when the water temperature is significantly low.


The Seat Sensor Prevents Incorrect Operation.

This SpaLet seat is equipped with a seat sensor to prevent the spray from spraying if switches are pressed when no one is sitting on the SpaLet seat.

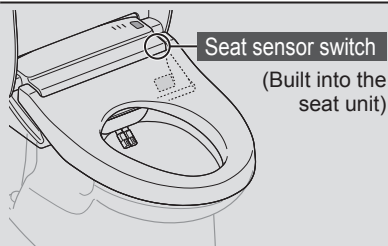

- * The back cleansing, back cleansing - mild, front cleansing, and dryer functions do not operate if no one is sitting on the SpaLet seat.
- * The seat sensor may not function correctly if covers are installed to the SpaLet seat or seat lid.
- * Back cleansing or similar functions may not operate during a brownout while using the SpaLet seat. In such cases, stand up from the SpaLet seat and wait 1 to 2 seconds before sitting back down.

Since the SpaLet seat is designed to move in the vertical direction, there is a space between the SpaLet seat cushion parts on the bottom side and the top of the toilet bowl.

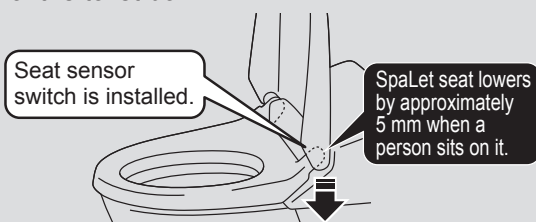

The SpaLet Seat and Seat Lid Close Slowly.

To reduce potential impact when the SpaLet seat and Seat lid close unexpectedly, the SpaLet seat is equipped with a slow close seat mechanism to close the SpaLet seat and lid slowly.

 


This slow close seat mechanism does not function when the power is turned off.

* Note that closing the SpaLet seat and lid forcefully may cause damage.

The SpaLet Seat is Equipped with a Low Battery Indicator.

The battery LED on the remote control flashes when the batteries are low. Replace with new batteries as soon as possible.



(Page 41)

* Pressing a remote control switch while the battery LED is flashing sometimes causes signals not to reach the toilet body, which results in no operation.

Bleed Air from the Water Pipes Before Initial Use.

Make sure to bleed air from the water pipes before using the SpaLet seat for the first time or after the water had been drained to prevent freezing.

When sitting on the SpaLet seat, water discharges from a point near the nozzle tip for approx. 30 seconds.

Release Air from the Water Pipe before Using the Product for the First Time.


Release air from the water pipe when using the product for the first time after installation or when water has been drained for freeze prevention.

When a person sits on the SpaLet seat, water will flow out from the nozzle area for approximately 30 seconds.

If You Have These Problems

Water Discharges from a Point Near the Nozzle Tip

Water discharges from a point near the nozzle tip immediately after a user sits down on the SpaLet® seat as well as before and after cleansing. This is required for the function and is not indicative of a failure.

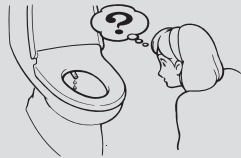

Warm Air has an Odor When the SpaLet seat is Used Initially.

Warm air may have a slight odor when the SpaLet Seat is new. This is not indicative of a malfunction. This odor will disappear as the SpaLet Seat is used.

Energy Conservation.

- Close the seat lid after use.
- Install a SpaLet seat cover.
- Do not set the temperature of the SpaLet seat or warm water too high.
- Frequently adjust the temperature settings in accordance with the season.
- Use the power save functions whenever possible if available.
- Always turn off the power if you will be gone for extended periods of time.

* Keep SpaLet seat covers clean.

* If there is any possibility of water freezing, do not disconnect the power plug from the outlet as the power must remain turned on. Refer to "If the Water in the Tank is Frozen" for more information.

(☞ Page 23)

Radio or Television Interference.

Interference may occur if a television or radio is located near the SpaLet seat. In such cases, move the radio or television as far away from the SpaLet seat as necessary to remove the interference.



Suitable Cleansers

Use a neutral cleanser suitable for plastics to clean plastic parts such as the SpaLet seat and lid. Do not use chlorinated cleansers, acidic cleansers, or disinfectants to clean the toilet bowl or other areas of ceramic material.

Formations of Condensation.

Due to differences in humidity or temperature of the room and toilet bowl, toilet surface, or water shut-off valve, water droplets (condensation) may form on the surface of these parts. Ensure adequate ventilation to prevent condensation. Use a dry cloth to wipe any droplets that have formed.

* Condensation may stain or damage the floor.

* This SpaLet seat is designed to be resistant to condensation. However, condensation can form depending on the room temperature and other conditions.

Urinating.


- When urinating while standing in front of the SpaLet seat, urine may splash outside the bowl and soil the floor or wall. Splashing of urine can be reduced if the user sits on the SpaLet seat during use.
- When urinating while sitting on the seat, urine may splash back depending on the sitting position or the direction of urination. Adjust your sitting position or use toilet paper to reduce splashed urine.

Odors During Nozzle Drain.

If there is insufficient ventilation when using a large kitchen range hood, for example, odor may temporarily occur when nozzle drain the SpaLet seat. Make sure to provide adequate ventilation.

Side of SpaLet Seat is Cold.

The heating function of the SpaLet seat primarily functions to heat the top surface, so the side may feel cold to the touch.

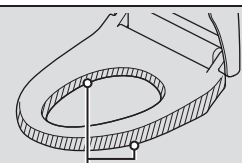

Side is Cold

If the Water in the Tank is Frozen

The water in the SpaLet® seat may freeze and cause damage during winter or other times when the water temperature is significantly low.

Perform the following procedure to prevent freezing and related damage.

Do not disconnect the power plug from the outlet. Leave the power turned on. Turn off any active power save function.

If the bathroom can be heated:

Refer to the "General Freezing Prevention Procedure" section.

If the bathroom cannot be heated:

Refer to the "Intermittent Nozzle Drain to Prevent Freezing" section or "Draining the Water to Prevent Freezing" section.

⚠ CAUTION




OBSERVE

Make sure to follow one of the freezing prevention procedures whenever there is a possibility of freezing.

* Damage from freezing may cause fire or flooding.

General Freezing Prevention Procedure

- 1** Set the [Seat Temp.] to "High" and close the seat lid (➡ Page 10).
- 2** Turn off any active power save function (➡ Page 18).
- 3** Heat the bathroom.

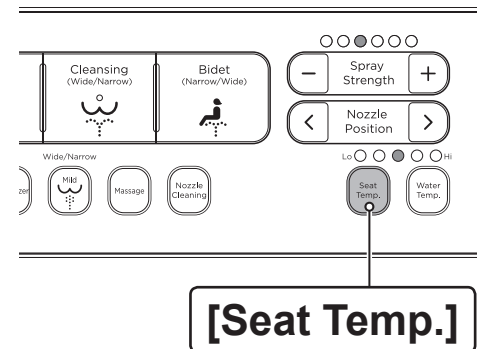


Intermittent Nozzle Drain to Prevent Freezing

- 1** Set the [Seat Temp.] to "High" and close the seat lid (➡ Page 10).
- 2** Turn off any active power save function (➡ Page 18).
- 3** Press and hold both the [Massage] and [Nozzle Position < >] buttons for at least 2 seconds.

* Each pressing of these buttons will turn the function on and off.

* Flush the SpaLet seat every 6 minutes to prevent freezing.

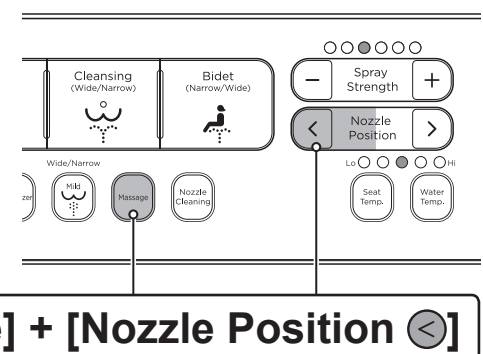

Canceling Intermittent Nozzle Drain

Press the [Massage] and [Nozzle Position < >] buttons at the same time for 2 seconds or longer.

* A beep will be heard on completion of the setting.

Draining the Water to Prevent Freezing

1 Set the [Seat Temp.] to “High” and close the seat lid (➔ Page 10).

2 Turn off any active power save function (➔ Page 18).

3 Manipulate the water drain plug in your building to drain water from the pipes.

* Do not close the water shut-off valve when manipulating the water drain plug.

* Refer to the drain plug User Manual for more information on the exact procedure.

4 Move the flush lever to drain water from the toilet tank.

5 Drain water from the toilet body

* Refer to steps **3** and **4** of the “Draining Water” procedure on page 40 to drain the water from the toilet bowl.

[CAUTION]


- When removing the strainer, be careful not to damage the water supply hose.

① Press and hold the [Nozzle Cleaning] and [Massage] simultaneously for at least 2 seconds.


* The water remaining in the seat unit drains out for approximately 15 seconds.

② Raise the water supply hose attached to the seat unit to drain water completely from the hose.

Seat unit water supply hose

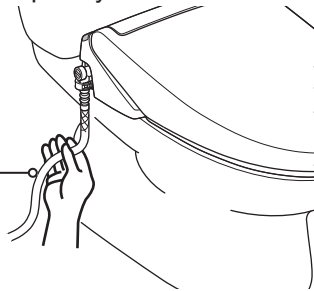

6 After the water is drained, hold the water supply socket with your hand, and tighten the strainer firmly using the tool.

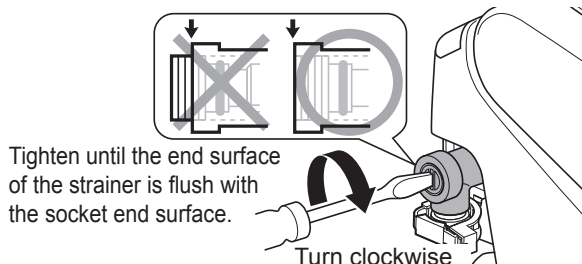

- If water has frozen and the spray does not operate. If the water supply hose or water supply connections have frozen and the spray does not operate, use a cloth immersed in warm water to warm the water supply hose or water supply connections to slowly thaw them, or warm the bathroom and allow them to thaw naturally.

[CAUTION]

- Do not pour hot water or blow hot air over the water supply hose.
 - * Doing so may result in damage to the water supply hose.
- Water may be discharged during the thawing process depending on the parts being warmed. Confirm the condition regularly during the thawing process.

Preparing the SpaLet® Seat if not using for a long time


Use the following procedure to drain the water and disconnect the power if the following circumstances are applicable.

- The SpaLet seat will not be used for an extended period of time due to travel. Not using the SpaLet for a long time may cause water to become contaminated. This contaminant could deposit on the SpaLet seat.
- The SpaLet seat will not be used for an extended period of time due to being in a vacation home. As temperatures drop in unoccupied houses during the course of seasons, water could freeze during times of cold temperatures.

Draining Water

1 Close the water shut-off valve to shut off the water supply.


- * If the open/close knob is difficult to turn, grasp it with a dry cloth and turn.

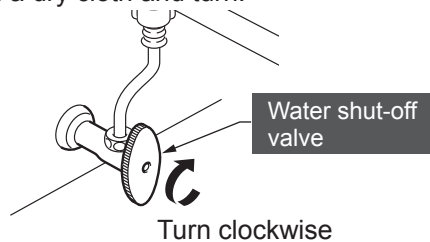

2 Manipulate the flush lever in the Flush Full direction to drain the water inside the toilet tank.

3 Drain the water from the water supply side.

- 1 Place a basin or similar beneath the strainer.
- 2 Remove the strainer, rinse away dirt that has attached to the strainer and O-ring, and then completely remove the part.

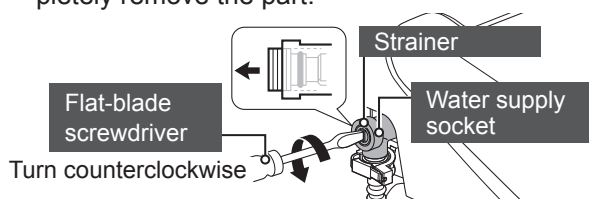


[CAUTION]

- When removing the strainer, make sure not to damage the water supply hose.


- 3 Insert the power plug into an outlet.

- 4 Press and hold both the [Massage] and [Nozzle Cleaning] buttons for at least 2 seconds.
 - * Remaining water in the toilet body will drain over a 15-second period.

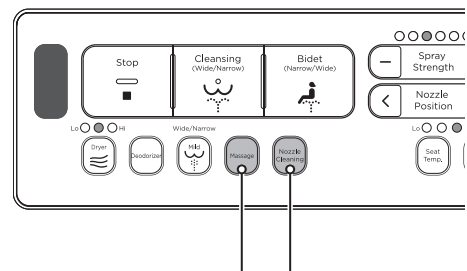

[Massage] + [Nozzle Cleaning]

- 5 Disconnect the power plug from the outlet.
- 6 After the water has been drained, securely reattach the strainer.

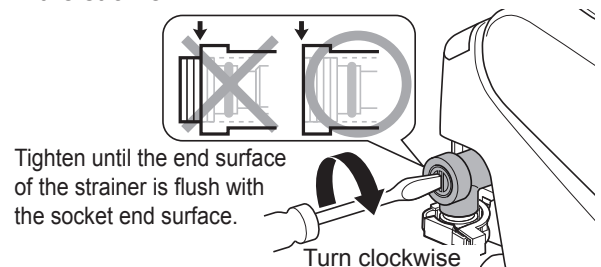

4 Check for leaks from the water shut-off valve.

- Reusing the SpaLet seat
Always perform the necessary preparations and checks before use. (Page 7)

Draining Water (Continued)

CAUTION



OBSERVE

- Make sure to close the water shut-off valve when removing the strainer inside the water shut-off valve.
- Make sure to install the strainer evenly on all sides.
- Check that there is no dirt remaining on the O-ring before installing the strainer.
 - * Check that the O-ring is free from foreign materials as failure to do so may result in water leakage and flooding.

Cleaning and Maintenance

Make sure to use the appropriate cleaner and tools in accordance with the type of dirt and material being cleaned to ensure cleaning is effective.

We also provide product recommendations for those who want to make cleaning and maintenance tasks easier.

Note that certain types of cleaners and tools must not be used with this product.


Cleaning Tools

| Type | | Location of Use |
|---------------|--|--|
| Soft cloth | Cut unused towels or T-shirts into appropriate sizes for cleaning. | SpaLet® seat and seat lid covers and toilet bowl |
| Sponge | Small and as soft a material as possible. | Nozzle tip |
| Rubber gloves | Use to prevent skin from becoming rough. Fold over to prevent water and cleaner from getting inside. | - |

Cleaning Areas and Types of Dirt

| | |
|---|----------------|
| Seat lid, SpaLet® seat, covers, and remote control | Page 29 |
| Dust, hand dirt, and small water stains | |

| | |
|--|----------------|
| Gaps between SpaLet seat and seat lid | Page 30 |
| Dust, hand dirt, and small water stains | |

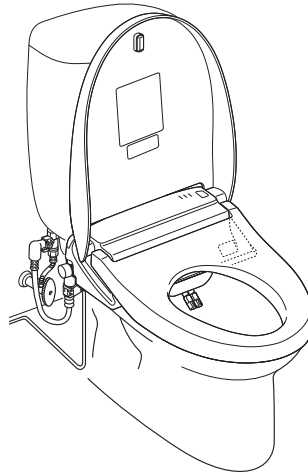

| | |
|-------------------------------------|----------------|
| Nozzle shutter | Page 34 |
| Water sludge and small water stains | |

| | |
|-------------------------------------|----------------|
| Nozzle | Page 34 |
| Water sludge and small water stains | |

| | |
|--|----------|
| Toilet bowl | - |
| Refer to the user manual of the toilet bowl. | |

⚠ WARNING



Spraying with water prohibited

Do not pour water or cleaning chemicals directly onto the toilet body or the power plug.

* Doing so may cause electric shock or fire.

⚠ CAUTION



OBSERVE

Use a mild cleaner suitable for plastic to clean plastic parts including the SpaLet seat.

* Avoid using toilet cleansers, home cleansers, bleach, benzene, thinner, scouring powder, cresol, or other abrasive products as such products may damage plastic parts or cause fire, electric shock, and even injury.



Cleaning and Maintenance

- Cleaning SpaLet® Seats and Lids 29
- Removing and Cleaning Seat Lids 30
- Cleaning Nozzle Areas 34
 - Cleaning Nozzles
 - Cleaning Nozzle Shutters
 - Cleaning Deodorizing Filters
- Replacing Nozzle Tips..... 37
- Dealing with Weak Deodorizing Effect ... 39
- Dealing with Weak Nozzle Spray 40
- Flashing Battery Level Indicator on the Remote Control 41
- Disassembling Product and Installing It at Another Location Such as When Moving 42


Cleaning SpaLet[®] Seats and Lids

Cleaning Plastic Parts Including SpaLet Seats, Seat Lids, Covers, and the Remote Control

- **Use a soft cloth to wipe parts.**

The longer the dirt has been remaining, more difficult it will be to remove. Use a damp, thoroughly wrung soft cloth to clean such areas.

Using damp cloths also protects against static electricity. Static electricity attracts dust, which can cause dark stains.

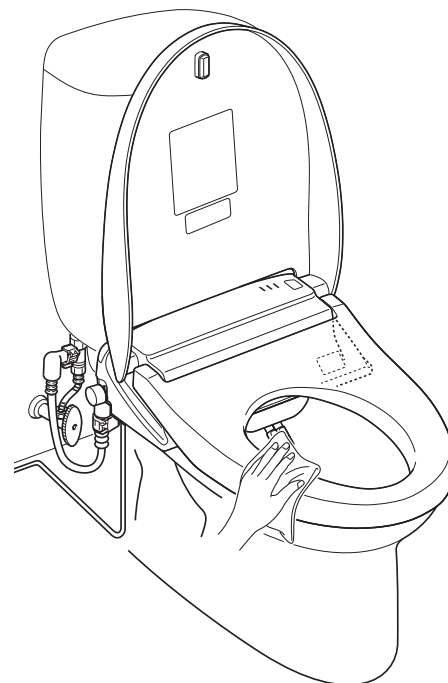

[CAUTION]

- Do not wipe parts with a dry cloth or toilet paper.
* Doing so may cause damage.
- Disconnect the power plug from the outlet to clean the remote control.
* Failure to do so may result in incorrect operation of the SpaLet seat.

Cleaning Gaps

The seat lid is easily removed. (→ Page 30)

About easy-cleanable seat


This SpaLet seat utilizes the Easy-cleanable seat. The seat is easy to clean due to the seamless design which prevents dirt from building up in crevices that are hard to clean.

Removing and Cleaning Seat Lids


The seat lid can be removed easily. Detach the seat lid to clean the hidden hinge areas or to wash the whole lid.

Removing the Seat Lid


- 1 Press the [Power] button to turn the power off. Confirm that the power indicator turns off.**

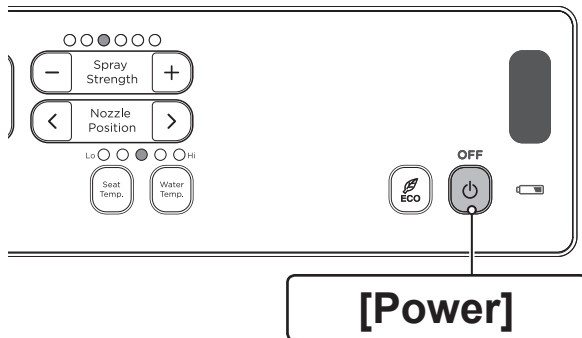

- 2 Hold the seat lid with both hands and lift it up so that the right side opens outwards, and then remove the pin from the pin hole.**

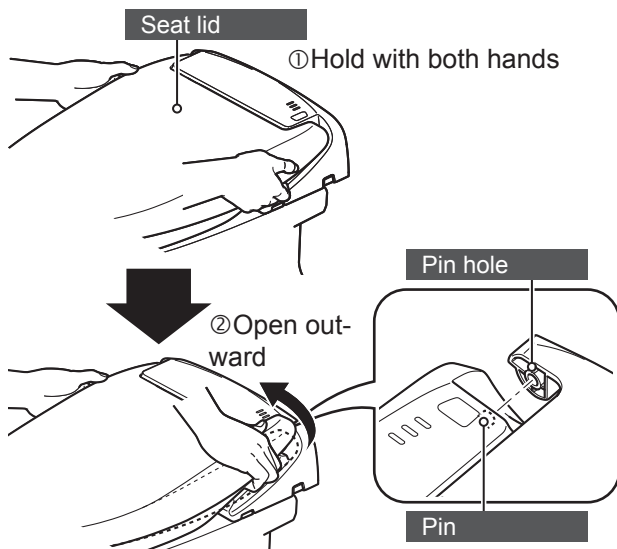

- 3 Remove the seat lid by lifting and twisting to to the left.**

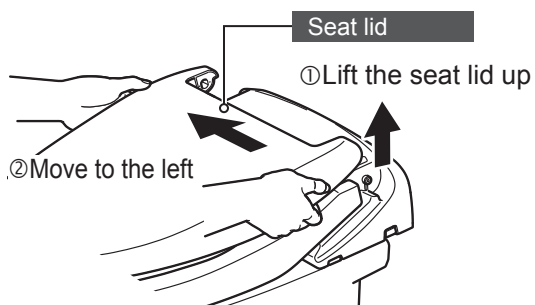

[CAUTION]


- Make sure to disconnect the power plug before removing the seat lid.
* Failure to do so may damage internal parts.
- Do not apply excessive force to the seat lid.
* Doing so may damage the part.
- Do not open the SpaLet® seat while the seat lid is removed.
* Doing so could cause damage such as scratching covers and the SpaLet seat.
- Do not use the SpaLet seat while the seat lid is removed.

Removing and Cleaning Seat Lids


Assembling the Seat Lid

- 1** Align and insert the pin hole on the left side of the seat lid with the pin on the left side of the toilet body.


* Align the seat lid with the angle of the toilet body pin to attach the seat lid.

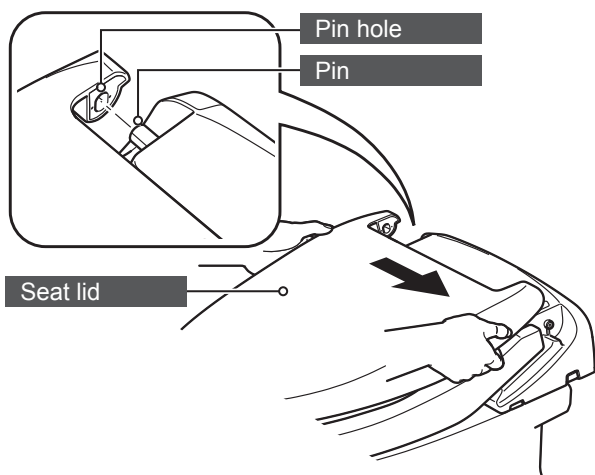


- 2** Open the pin hole on the right side of the seat lid outwards and then align the pin with the pin hole to attach the seat lid.

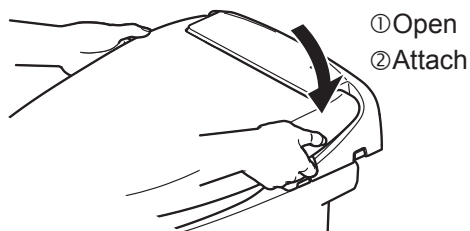

- 3** Press the [Power] button to turn the power on, and confirm that the power indicator in the seat unit indicator section lights.

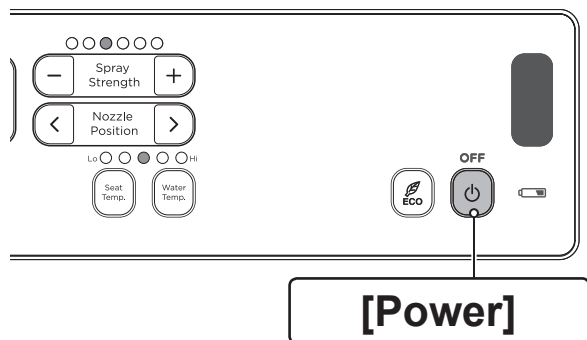

- Seat unit indicator section

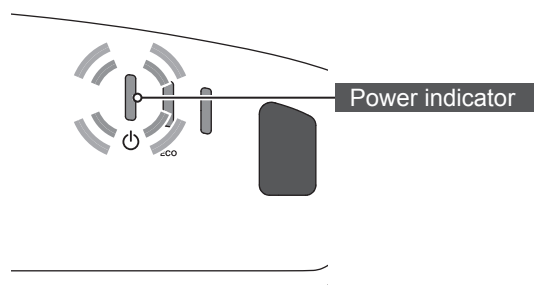


- Reusing the SpaLet® seat
Always perform the necessary preparations and checks before use. (Page 7)

Cleaning the Areas of the SpaLet® Seat That Are Covered by the Seat Unit


1. Removing the seat unit

1. Remove the power plug from the wall outlet. (See caution 1.)

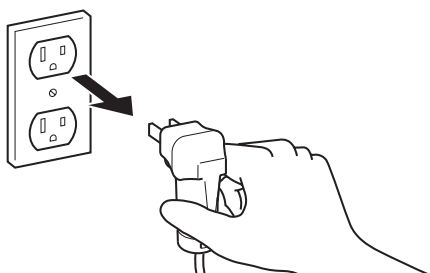


2. Close the water shut-off valve to cut off the water supply. (See caution 2.)

Since the water shut-off valve is adjusted beforehand, keep track of the turns so you can return the valve to its original position.

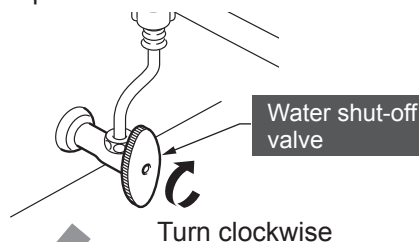


3.
 - ① Pull the lock lever on the right side of the seat unit.
 - ② Slide this product forward, **raise it slightly**, and remove it from the SpaLet seat. (See caution 2, 3 and 4.)

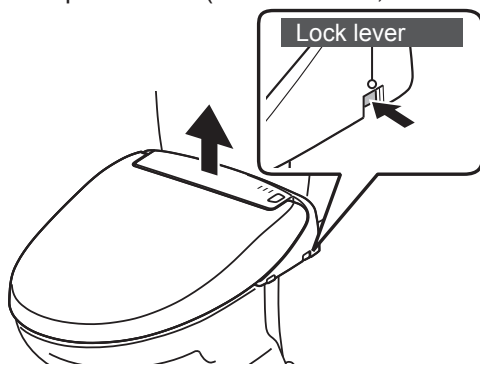

* When removing this product, slide the unit slowly without holding the SpaLet seat or seat lid. Do not use excessive force.

4. Carefully place the seat unit on the rim of the toilet bowl.

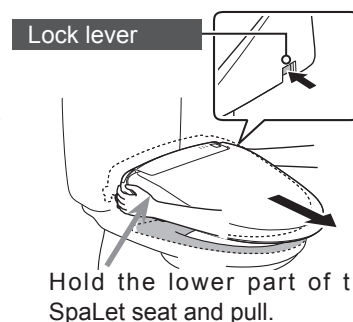

CAUTION

1. **Remember to remove the power plug from the wall outlet.**

* If the water heater operates with no water in the tank, it could cause smoke or fire.

2. **Do not pull on any cord or water supply hose.**

* Doing so may lead to damage or a water leak.


3. **Carefully handle the seat unit when removing or cleaning.**

* Failure to do so may lead to water leakage.


4. **Never turn the seat unit upside down while it is connected to the power supply.**

* It could cause damage to this product.

- Do not pull.

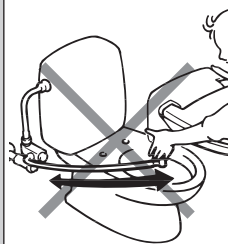

- Do not reverse
- Do not place on the floor.

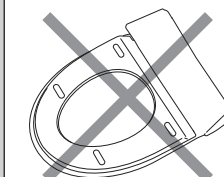

Removing and Cleaning Seat Lids

2. Cleaning

Wipe the seat unit clean using a soft cloth dampened with water.



* See the user manual for details on cleaning the toilet bowl.

! DANGER

Do not pour water or cleanser inside this product. Do not splash water on the seat unit or the power plug.

* There is danger of electric shock or fire.


CAUTION

When cleaning the toilet bowl, take care not to splash the seat unit with detergent. Before installing the seat unit, wipe the detergent off from the toilet bowl using a cloth dampened with water.

* Leaving detergent on the seat unit may lead to product failure.


Do not put your hand or any object inside the air outlet or around the nozzle.

* Doing so may injure your hand or lead to product failure.

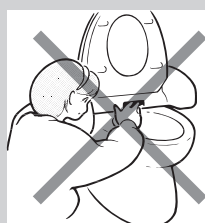

3. Assembling the Seat Unit


1. Place the seat unit on the toilet bowl. Align the inverted triangle mark (▼) on the mounting plate with the protrusion on the rear of the seat unit.

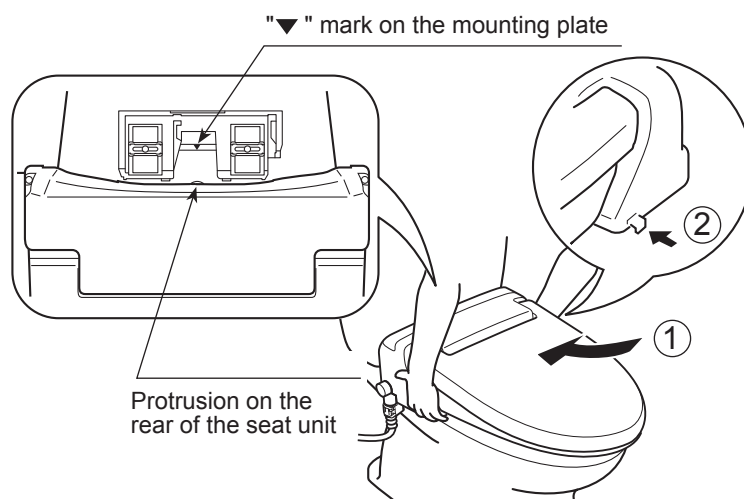

2. **Slightly raise the front of the seat.** Slide the seat on to the mounting plate. Push the lock lever to secure the seat.
* If this product is not pushed all the way back, the lock lever cannot be pushed back in.
After locking this product in place, shake it slightly back and forth and left and right, making sure it has been securely locked in place.

3. Open the water shut-off valve to its original position and run water through this product.

* Make sure water is not leaking from any of the joints.

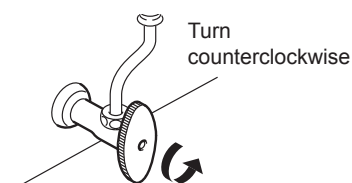

4. Insert the power plug into the outlet.
At this time, check to make sure the water temperature and seat temperature indicator LEDs are illuminated.

5. After completing the assembling, perform an operational check.

CAUTION

Check that the seat unit has been completely locked in place.

* If not, the seat unit may slide off the toilet bowl.

Do not bend any hose using excessive force.

* Doing so may permanently deform it or cut off the water supply.

Cleaning Nozzle Areas

Use the following procedure to clean areas around nozzles.

● Cleaning Nozzles

- To clean nozzles while using (sitting on) the SpaLet® seat: [Cleaning Nozzles with the Remote Control (↗ this page)]
- To thoroughly clean nozzles: [Ejecting Nozzles (↗ Page 35)]

● Cleaning Nozzle Shutters

- To remove and clean nozzle shutters:
[Ejecting Nozzles (↗ Page 35), Removing Nozzle Shutters (↗ Page 36)]

● Cleaning Deodorizing Filters


- To restore the deodorizing effect: [Ejecting Nozzles (↗ Page 35), Cleaning Deodorizing Filters (↗ Page 39)]

[Cleaning Nozzles with the Remote Control While Using the SpaLet seat]

Nozzles can be washed while using (sitting on) the SpaLet seat.

1 Press the [Nozzle Cleaning] button.

* The nozzle will be washed for approximately 15 seconds while stored within the toilet body.

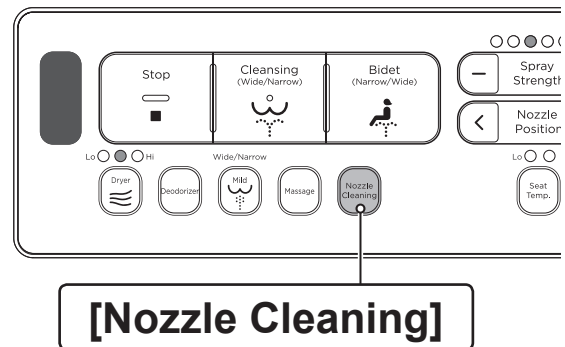

Cleaning Nozzle Areas

Extending Nozzles/Opening Shutters [Ejecting Nozzles]

The nozzle can be ejected for cleaning or to replace tips.

The nozzle shutter can be opened and removed, and the deodorizing filter can also be removed.


1 Open the seat lid and the SpaLet® seat.

2 Press the [Nozzle Cleaning] button.

* A nozzle shutter will open, then nozzle moving back and forth while spraying water to wash the back nozzle and front nozzle. It washes alternately for about 80 seconds.

* The nozzle will automatically retract after approximately 5 minutes.

After the nozzle has retracted, press the [Nozzle Cleaning] button again to extend the back nozzle again.

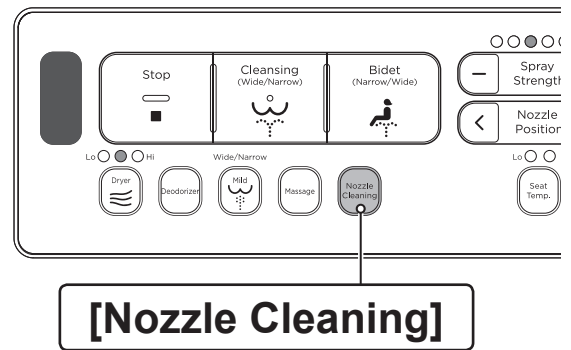

3 Press the [Nozzle Cleaning] button.

* The back nozzle retracts followed by ejection of the front nozzle.

* The nozzle will automatically retract after approximately 5 minutes.

After the nozzle has retracted, press the [Nozzle Cleaning] button two times to extend the front nozzle again.

4 Press the [Nozzle Cleaning] button.

* The nozzle shutter opens.

* The nozzle shutter opens to enable removal of the shutter or cleaning of the deodorizing filter.

* Refer to the "Removing the Nozzle Shutter" and "Cleaning the Deodorizing Filter" sections. (Page 39)

5 Press the [Stop] button to return the nozzle shutter to the original position.

* If the nozzle catches, perform the procedure to eject the nozzle again.


[CAUTION]

- Do not apply excessive force to nozzles.
 - * Doing so may cause malfunction.
- Do not manually force the nozzle forward or backward.
 - * Doing so could cause a malfunction such as the nozzle not moving correctly. If the nozzle is incorrectly pulled forward or pushed backward, disconnect the power plug from the outlet and wait approximately 10 seconds before reconnecting the power plug.
- Do not scrub with a toothbrush.
 - * Doing so may cause damage.

Removing the Nozzle Shutter


- 1 Open the seat lid and SpaLet® seat.
- 2 Press the [Nozzle Cleaning] button and open the nozzle shutter.

* The back nozzle will stretch out and push up the nozzle shutter.

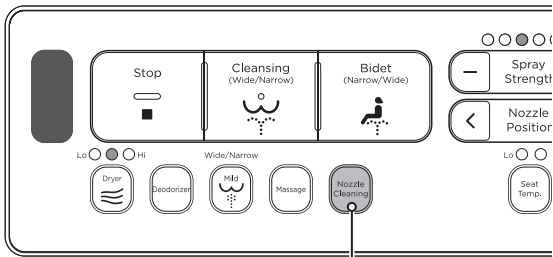

[Nozzle Cleaning]

- 3 Pull the nozzle shutter down toward you with both hands to remove.

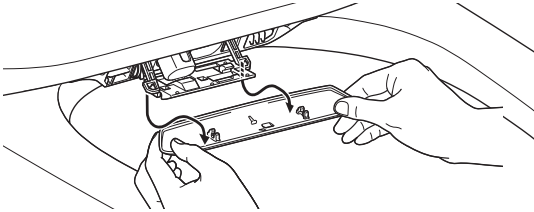


- 4 Clean the removed nozzle shutter.
 - Use a soft, damp cloth to clean.

[CAUTION]

- Do not wipe parts with a dry cloth or toilet paper.
- Do not scrub with a toothbrush.
- * Doing so may cause damage.

Assembling the Nozzle Shutter

- 1 Attach the two lugs of the nozzle shutter into the slot in the shutter base from below.
 - * If the shutter base is closed, perform the procedure described in the "Opening the Nozzle Shutter" section.

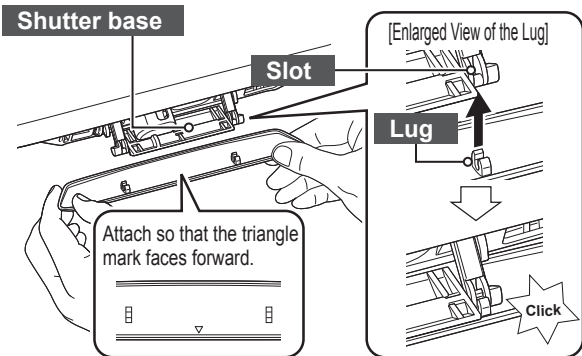

- 2 Press the [Stop] button to return the nozzle shutter to the original position.

[CAUTION]

- Press until it clicks into place. Make sure the shutter is correctly installed.
- Installing the shutter in the incorrect vertical orientation can cause malfunctions such as no nozzle extension or no shutter opening.
- Do not apply excessive force.
 - * Doing so may damage the part.

Replacing Nozzle Tips

When stains cannot be removed from the nozzle tips, the nozzle tips can be replaced with new parts.


Removing the Nozzle Tips

1 Raise the seat lid and SpaLet® seat.

2 Press the [Nozzle Cleaning] button.


* The back cleansing nozzle extends.

* After water flows out from the nozzle area for approximately 10 seconds, the back cleansing nozzle extends, but the nozzle does not discharge any water.

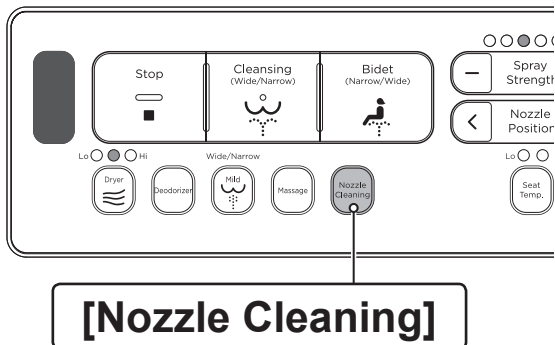


< Replacing the front cleansing nozzle >
Press the [Nozzle Cleaning] button again.

* The front cleansing nozzle extends.

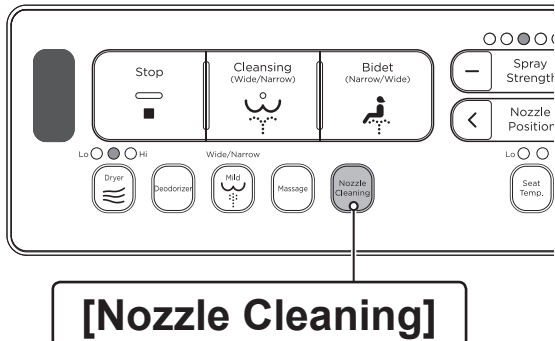

3 Turn the nozzle tip counterclockwise and align the Detach mark on the right side of the nozzle tip with the Center mark on the nozzle wand, and then pull out the nozzle tip.

* Pull the nozzle slightly, hold the nozzle at its base with your hand, and then remove the nozzle tip.

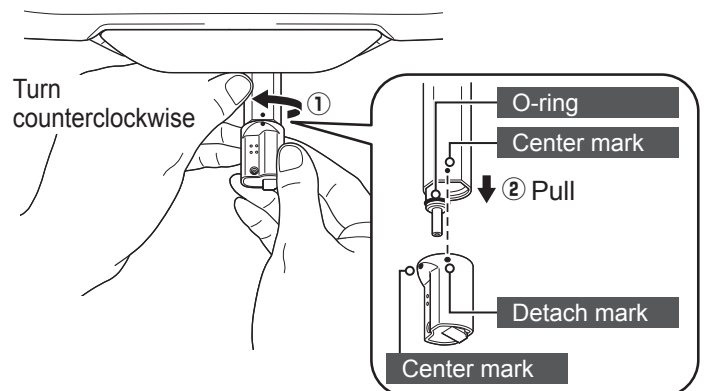

* While the nozzle is held in place, install a new nozzle tip according to the procedure described in "Installing the Nozzle Tips" (Page 38).

[CAUTION]


- The nozzle tips cannot be replaced if a person is sitting on the SpaLet seat.

Installing the Nozzle Tips

* If the nozzle wand retracts, follow the steps **2** and **3** in the section, "Removing the Nozzle Tips," again to extend the nozzle.

1 Align the **Detach** mark on the right side of the nozzle tip with the **Center** mark on the nozzle wand, and then insert the nozzle tip fully and turn it clockwise until it can no longer be turned.


* Hold the nozzle at its base with your hand when installing the nozzle tip.

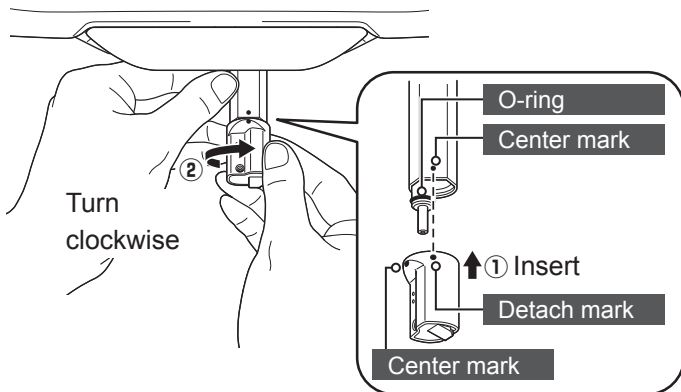

[CAUTION]

- There are two nozzles; one for back cleansing and the other for front cleansing. Be sure to install the nozzle tips to their nozzle wands.
- When installing the nozzle tip, make sure that the hole on the nozzle tip is positioned at the top.
- Be careful not to damage the O-ring.


2 Check the joint.

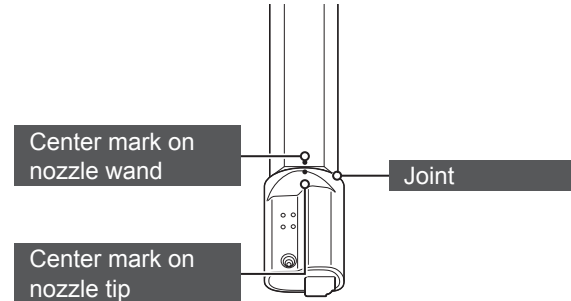

[CAUTION]

- After the installation, make sure that the Center mark on the nozzle tip is aligned with the Center mark on the nozzle wand.
- * If the two Center marks are not aligned, a malfunction may occur and the angle of the discharged water may deviate from the proper position.

3 Press the **[Stop]** button to retract the nozzle.

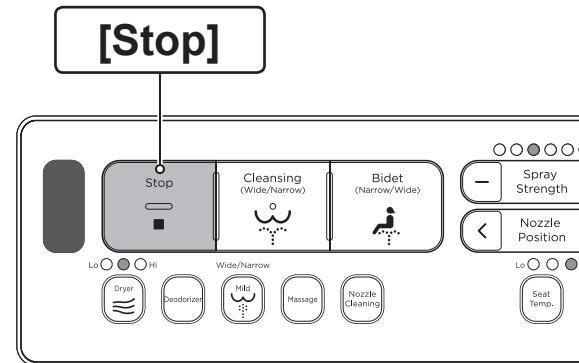

Dealing with Weak Deodorizing Effect


If dust adheres and accumulates on the deodorizing filter, the deodorizing effect weakens. When you feel that the deodorizing effect has weakened, clean the deodorizing filter.

Cleaning the Deodorizing Filter


- 1 Disconnect the power plug from the power outlet.**
- 2 Remove the deodorizing filter located on the right side of the seat unit.**

* If the deodorizing filter is hard to remove, push down the filter with your hand and then remove.


< Right side of the seat unit >

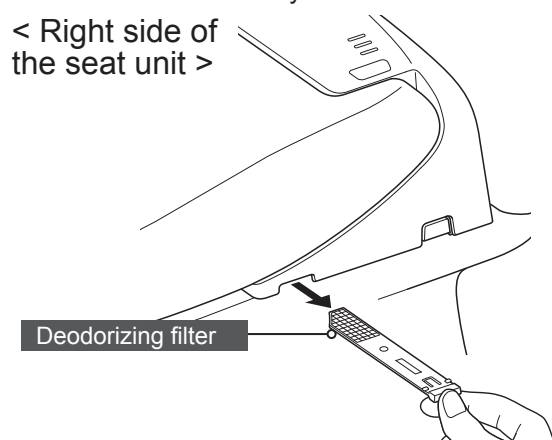

- 3 Using a toothbrush or the like, remove dust from the filter.**

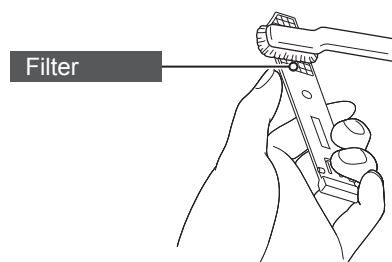

- 4 Reinstall the deodorizing filter.**

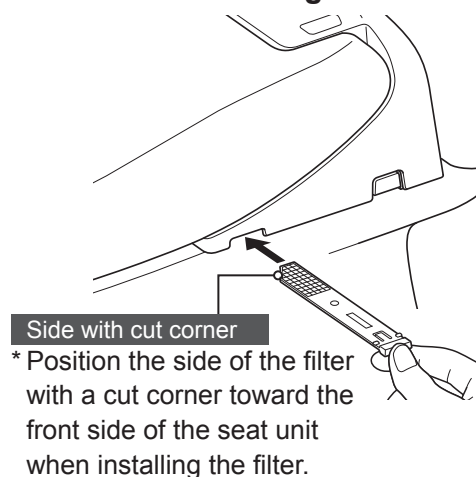

- 5 Insert the power plug into the power outlet.**

- Before using
Be sure to check the procedure for test operation (Page 7).

❖ When unpleasant smell still remains after cleaning the deodorizing filter

The product contains parts that absorb odors.

If unpleasant smell still remains after cleaning the deodorizing filter, request your dealer to replace the parts.


Dealing with Weak Nozzle Sprays

If long-term use of the SpaLet® seat has resulted in a weak flow of water while intermittent nozzle drain function is activated or using the spray, use the following procedure to clean the strainer. This should be performed roughly once every 2 years.

Cleaning the Strainer

1 Close the water shut-off valve to shut off the water supply.


* If the open/close knob is difficult to turn, grasp it with a dry cloth and turn.

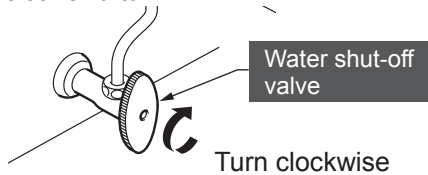

2 Press the [Nozzle Cleaning] button.

3 Using one hand, hold the water supply socket located at the lower left corner of the seat unit as viewed from the front, and then turn the strainer located at the center of the water supply socket using the tool.

* Since a small amount of water discharges, place a small bucket or container below to receive the water.

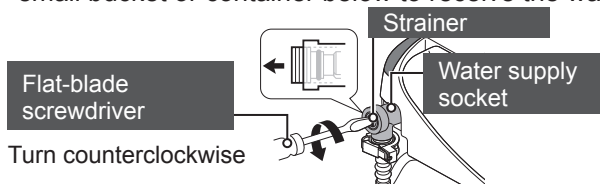


❖ Note regarding the removal of the strainer

The water supply socket rotates due to its structure. This does not denote a defect.

[CAUTION]


- When removing the strainer, make sure not to damage the water supply hose.

4 Wash away all debris inside the strainer and from the O-ring.

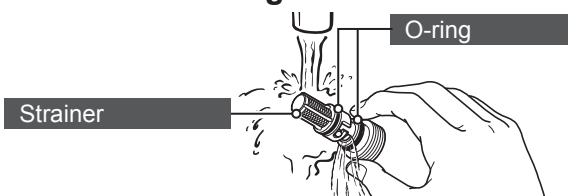

5 While holding the water supply socket with your hand, tighten the strainer firmly using the tool.


* Tighten until the end surface of the strainer is flush with the socket end surface.

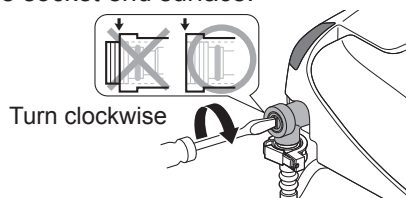

[Mounting Precautions]

- Make sure the strainer assembly is reinstalled properly after removing it for washing.

6 Fully open the water shut-off valve.

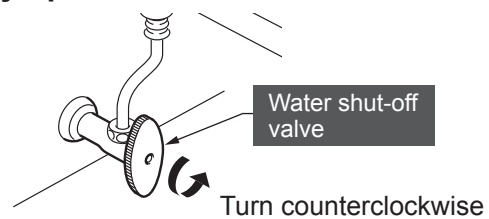

7 Check for leaks from the water shut-off valve.

⚠ CAUTION



OBSERVE

- When removing the strainer, make sure to close the water shut-off valve and press the flush button.
- When installing the strainer, make sure that the water shut-off valve is tightened completely.
- Check that there is no debris remaining on the O-ring before installing the strainer.
- * Check that the O-ring is free from foreign materials as failure to do so may result in water leakage and flooding.


■ When the strainer is excessively dirty

Separate the screen part of the strainer from the threaded part, and wash them with water.

* Be careful not to damage the O-ring. If the O-ring becomes torn or scratched, water can leak.

* Be careful not to damage the screen with a sharp object.

* If the screen becomes torn, dirt can enter and cause a malfunction.

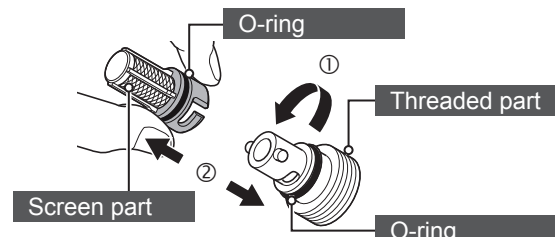


Flashing Battery Level Indicator on the Remote Control

The battery LED on the home screen flashes when the batteries are low. (☞ Page 21)


[CAUTION]

- Install batteries in the correct orientation of polarity as illustrated on the remote control display.
- Do not use a mix of new and old batteries.
- Use alkaline batteries only.
- Be careful not to touch any switches on the remote control when replacing batteries.

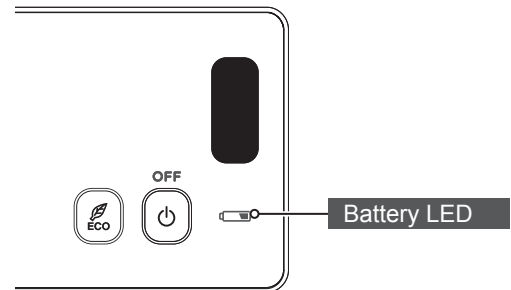


Replacing Remote Control Batteries

1 Lift the remote control out of the holder.

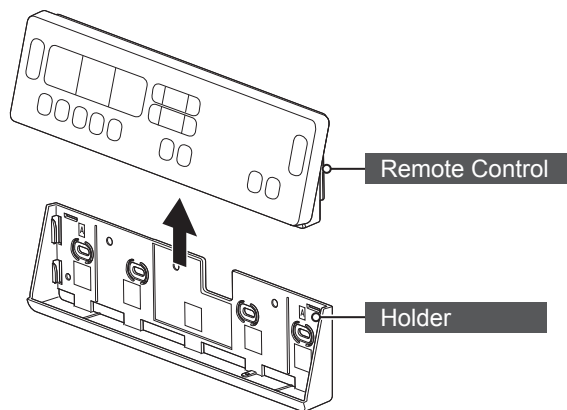

2 Remove the back cover and replace with two new 1.5-V AA alkaline batteries.

* If the back cover is difficult to remove, use a flat-blade screwdriver or similar tool to release the lock.

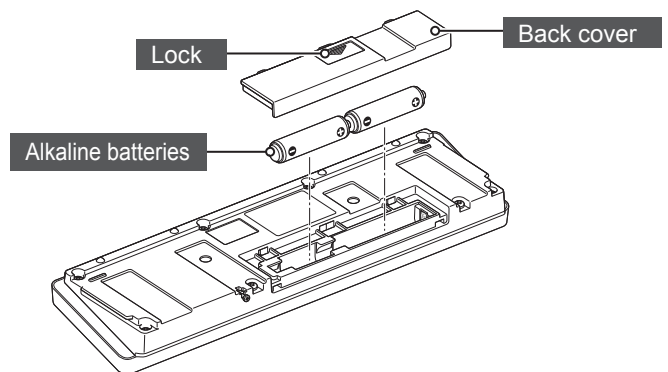

3 Return the remote control into the holder.

(Reference)


- The battery LED will flash when the batteries are low. This LED normally does not appear.
- The batteries supplied with the SpaLet® seat are used for operation checks at the factory, and so it has a shorter service life than typically available batteries.
- Batteries may become fully discharged before the battery LED flashes depending on the size of the room and material/color of the walls, particularly with darker colors.
- When replacing batteries, wait for the battery LED to disappear after the batteries have been removed before inserting the new batteries. This is because the battery LED may remain flashing after batteries have been replaced.

Disassembling Product and Installing It at Another Location Such as When Moving


Disconnecting the Water Supply Hose

* Before disconnecting the water supply hose, close the water shut-off valve and press the [Cleansing] button to release internal pressure.


Remove the clip, and then disconnect the water supply hose.

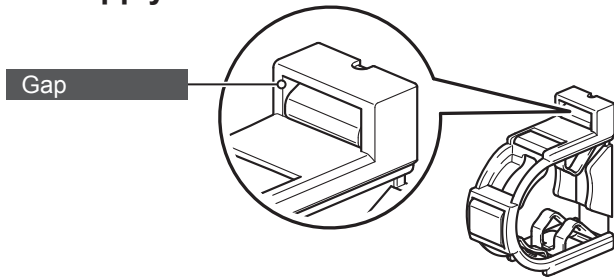


1 Insert a flat-blade screwdriver into the gap.

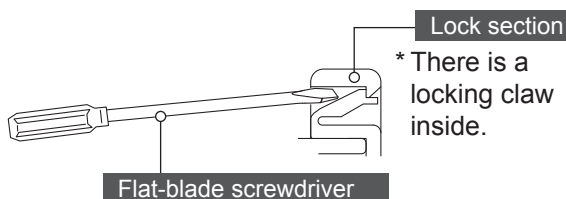

2 Push the tip of the screwdriver downward toward the base of the box.

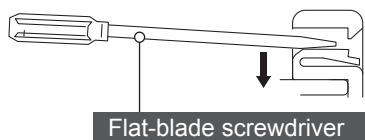


3 With the screwdriver positioned in the condition described in 2 push the screwdriver to disengage the claw.

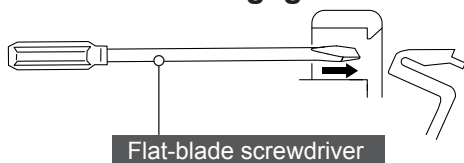

* It becomes easier to disengage the claw if you twist the screwdriver slightly while pushing.


Connecting the Water Supply Hose

1 Attach the water supply hose to the water shut-off valve.

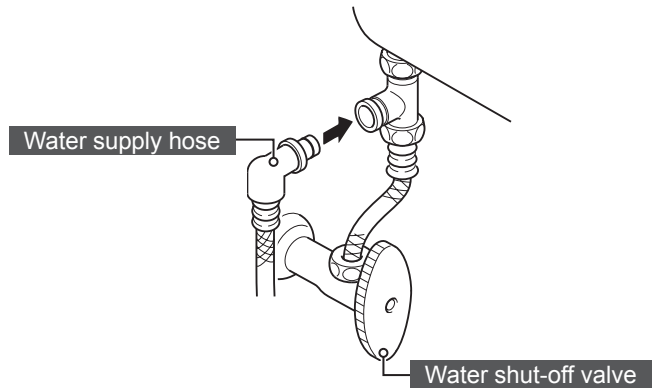

2 Attach the clip as shown in the illustrations below. A clicking sound is produced when the clip is attached properly.

* After the installation, turn the clip to ensure its firm attachment. Also, pull the water supply hose lightly to confirm secure connection.

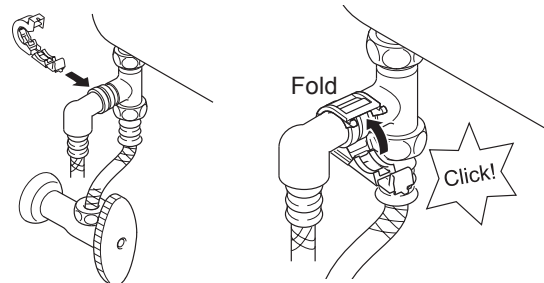


■ Removing the product such as when moving to another house

When the product is removed and installed at another location such as when moving, follow the procedure described below.

1. Remove the SpaLet® seat by following the procedure described in the section, "Removing the seat unit" (Page 32).
2. Push down the mounting plate. (Page 33).
3. Remove the nuts located on the underside of the SpaLe seat unit.

* Do not lose the removed parts.

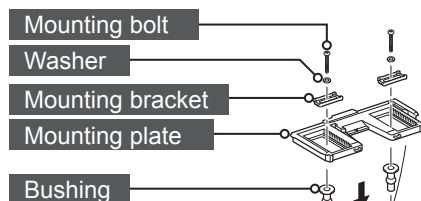

Troubleshooting

Failures can be easily corrected in some cases. Please check the following items.

| All Functions | | | |
|---|---|---|-------------|
| Symptom | Cause | Solution | Page |
| All functions are inoperable (power indicator is not on). | Electricity is not supplied to power outlet. | Check for a power failure, tripper breaker, etc. | - |
| | The power is turned off (power indicator is not on). | Press the [Power] button and make sure the power indicator on the seat unit indicator section turns on. | 7 |
| | The power plug is not connected to the power outlet. | Completely connect the power plug to the outlet. Wait about 10 seconds before re-connecting the power plug. | 7 |
| | Voltage other than 120V is being used. | Disconnect the power plug and have the SpaLet® seat serviced | - |
| Corresponding operations are not performed when switches on the remote control are pressed (power indicator is on). | Batteries in the remote control have completely discharged. (Battery LED is on [*]) | Replace with new batteries. | 41 |
| | Batteries are installed in the remote control in the incorrect orientation of polarity. | Insert the batteries in the correct orientation. | 41 |
| | Remote control transmitter or receiver is dirty or wet. | Remove the dirt or water. | - |
| | A fluorescent light with inverter ballast is in use. | Turn off the light and try again. If the SpaLet seat then operates normally, there is no malfunction in the product. | - |
| | Remote control receiver is exposed to direct sunlight. | Take the necessary action to prevent exposure to direct sunlight. | - |

*: When the remote control is installed on the wall opposite the receiver, the batteries may fully discharge before the battery LED starts flashing.

Back Cleansing, Back Cleansing-Mild, and Front Cleansing

| Symptom | Cause | Solution | Page |
|--|--|---|------|
| Nozzle spray does not discharge. | Water shut-off valve is closed. | Turn the open/close knob 180° counterclockwise. | 7 |
| | The strainer is clogged. | Clean the strainer. | 40 |
| | The water pressure is low. Water pressure is set to the lowest setting. | Press the [+] side of the [Spray Strength] button. | 15 |
| | Seat sensor is not triggering. | Sit on the SpaLet® seat. | 21 |
| | The temperature of the water supplied to the SpaLet seat is too high. | This is not a malfunction. When the water temperature exceeds 104°F due to anti-freezing pipe heaters or similar, the nozzle spray does not discharge until hot water is removed from the pipe. In this scenario, drain the hot water from the pipes by nozzle drain the SpaLet seat and then try pressing the button for the desired cleansing function. If this phenomenon occurs repeatedly, then review the usage of the anti-freezing pipe heater. | – |
| It takes longer than usual for the nozzle spray to discharge. | The water temperature is not set to an appropriate temperature. | This is not a malfunction. When water temperature is low such as in winter, it may take time to prepare warm water before the nozzle spray discharges. | – |
| The preparation time before the nozzle spray discharges may be longer than models you have used in the past. | When purchasing a replacement model, the preparation time before the nozzle spray discharges may be longer due to changes in product design. This is a feature of the product and is not a malfunction. | | – |

Troubleshooting

Back Cleansing, Back Cleansing-Mild, and Front Cleansing (Continued)

| Symptom | Cause | Solution | Page |
|--|--|--|------|
| The nozzle spray is not warm. | The water temperature is not set to an appropriate temperature. | Set the water temperature to an appropriate temperature. | 10 |
| | The temperature of the water being supplied is relatively cold. | This is not a malfunction. When water temperature drops, such as in winter, spray strength may weaken slightly. | – |
| The spray does not reach the correct position. | When purchasing a replacement model, the position that the spray reaches may feel different due to changes in product design. This is a feature of the product and is not a malfunction. | | – |
| Nozzle spray is weak. | The spray strength is low. | Press the [+] side of the [Spray Strength] button. | 15 |
| Nozzle is disconnected (hanging) | The nozzle shutter has been brushed off during cleaning. | Attach the nozzle shutter correctly. | 36 |
| The spray may be stronger or weaker than models you have used in the past. | When purchasing a replacement model, the spray may feel stronger or weaker compared to the product before replacement due to design changes. This is a feature of the product and is not a malfunction. | | – |

Seat heating

| Symptom | Cause | Solution | Page |
|---|---|--|------|
| The SpaLet® seat is not warm. | The seat temperature is not set to an appropriate temperature. | Set the seat temperature to an appropriate temperature. | 10 |
| | The power save function is activated. | Cancel the power save function. | 18 |
| The seat cools after sitting on the SpaLet seat for an extended period of time. | The seat heater auto off function is turned on. | Turn off the seat heater auto off function. | 20 |
| | The seat has been used for over an hour. | The seat heater is automatically turned off if a user sits on the SpaLet seat for over an hour. Stand up from the seat and sit down again. | – |
| Side of SpaLet seat is cold. | The heating function of the SpaLet seat primarily functions to heat the top surface, so the side may feel cold to the touch. This is a feature of the product and is not a malfunction. | | 22 |

Deodorizer

| Symptom | Cause | Solution | Page |
|---|--|--|------|
| The deodorizer fan does not operate. | The automatic deodorizing function is turned off. | Turn on the deodorizer. | 19 |
| | The seat has been used for over 2 hours. | The seat sensor may make false detections. The deodorizer fan turns off automatically when a detection triggered state lasts for at least 2 hours. Clean the SpaLet seat or try standing up from the seat and sitting back down again. | – |
| The deodorizing effect has weakened (odors are noticeable). | Dirt is present on the deodorizing filter. | Clean the deodorizing filter. | 39 |
| | The SpaLet seat has not been used for a long period of time. | The SpaLet seat is equipped with a part that absorbs odors. Have this part replaced. | – |

Troubleshooting

Warm Air Drying

| Symptom | Cause | Solution | Page |
|--|--|--|------|
| Warm Air Does Not Come Out | Seat sensor is not triggering. | Sit on the SpaLet® seat. | 21 |
| Warm Air is Not Warm | The warm air drying temperature is not set to an appropriate temperature. | Set the warm air drying temperature to an appropriate temperature. | 10 |
| | Differences in temperature can be felt in accordance with usage conditions. The air temperature is compliant with International Electrotechnical Commission (IEC) standards. | | – |
| Warm air stops midway through the process. | This function has been used for more than 4 minutes. | Press the [Dryer] button again. | 17 |

Bowl Spray

| Symptom | Cause | Solution | Page |
|---|---|--|--|
| The bowl spray function does not operate. | The bowl spray function is set to OFF. | Set the bowl spray function to ON. | 13 ★ Function for comfort enhancement |
| | The bowl spray will not be activated immediately after the user stands up from the SpaLet seat. | Mist will not be sprayed if a person sits on the SpaLet seat again within approximately 80 seconds after standing up from the SpaLet seat. As long as the inside of the bowl is wet, there still is an effect of the bowl spray. There is no problem in using the product. | 13 |

Other

| Symptom | Cause | Solution | Page |
|--|--|---|------|
| There are water drops on the underside of the SpaLet® seat. | Water drops from the spray land on the underside of the SpaLet seat. | Frequently wipe the water drops. Additionally, sitting further back on the seat when using the spray will lessen splashing. | – |
| The seat unit is unstable. | The seat unit is not locked in place. | Press down the seat unit to ensure that it is firmly locked in place. | 42 |
| | The mounting plate is loose. | Tighten the mounting nuts. | – |
| A gurgling sound comes from the SpaLet seat <ul style="list-style-type: none"> • Power plug is connected to an outlet • Nozzle spray has stopped | <p>This is not a malfunction.</p> <p>This is the sound of the motor operating during normal SpaLet seat operation. If the water pressure and nozzle position can be adjusted properly, then there is no problem.</p> | | – |
| The power indicator is flashing. | Water supply is not connected to the SpaLet seat due to a suspended water supply or closed water shut-off valve. | After restoring the water supply, open the water shut-off valve and test operation. If the power LED is still flashing, then disconnect the power plug and have the SpaLet seat serviced. | 7 |
| | Several functions are malfunctioning. | If the power LED flashes after the power has been turned off, this indicates that the SpaLet seat is damaged. Disconnect the power plug from the outlet and have the SpaLet seat serviced. | – |
| | An anti-freezing heater is attached to the water supply hose or other pipe. | Turn off the anti-freezing heater. When the water temperature exceeds 104°F, the safety system in this product stops operation. | – |

Troubleshooting

Other (Continued)

| Symptom | Cause | Solution | Page |
|---|---|---|------|
| <ul style="list-style-type: none"> There is play in the SpaLet® seat. One of the feet on the back side of the SpaLet seat is not making contact with the toilet bowl. | <p>This is not a malfunction.</p> <p>The construction of the SpaLet seat is different at the top and bottom sections. For this reason, there are gaps between the SpaLet seat feet and the toilet bowl.</p> <p>This SpaLet seat is designed so that only one front foot makes contact with the toilet bowl. Therefore, the SpaLet seat can continue to be used.</p> | | – |
| There is a gap between the toilet body and ceramic portion. | <p>This is not a malfunction.</p> <p>A gap may be visible due to the individual differences of fired ceramic products.</p> <p>Please continue to use.</p> | | – |
| Water is leaking | The strainer is loose. | Tighten the strainer. | 40 |
| | There is debris on the strainer. | Clean the strainer. | 40 |
| | The temperature is too high. Condensation is forming. | Frequently wipe the water drops. Also make sure that there is sufficient ventilation. | – |
| Desire to reset all settings to the default settings. | Reset all settings changed using the procedures described in the "Useful Functions" section to the default settings. | Perform the procedure to reset settings to default settings. | 20 |
| Using the SpaLet seat causes the room lighting to flicker. | <p>This is not a malfunction.</p> <p>This can happen due to the temporary increase in power consumed to heat the water for the nozzle spray. Please continue to use.</p> | | – |
| The nozzle shutter does not close. | <p>This is not a malfunction.</p> <p>The nozzle filter opens while the air shield deodorizer is operating. Turn off settings as necessary.</p> | | – |
| The fan operating sound can be heard when the product is not used. | The deodorizing fan operates for 1 minute after the user stands up from the SpaLet seat. | | 13 |

Specifications

| | | | |
|--|----------------------------------|--|---|
| Product model | | 8018A60GRC-020 | |
| Rated Power Source | | 120 VAC, 60 Hz | |
| Rated Power Consumption | | 1,300 W | |
| Supply Water Pressure | Minimum Required Pressure | 7.25 psi (when water is flowing) | |
| | Maximum Allowed Pressure | 108.7 psi (hydrostatic pressure) | |
| Operating Temperature Range | | 32°F to 104°F | |
| Product Dimensions | | 16 1/4" (413mm) (W) x 21 5/16" (541mm) (D) x 4 1/16" (104mm) (H) | |
| Product Weight | | Approx. 9.48 lbs. | |
| Power Cord (Power Supply Connection Method) | | Effective length: 39" (990mm) | |
| Functions | Cleansing | Water Supply System | Direct connection to water supply |
| | | Water Heating System | Instantaneous water heater |
| | | Amount of Water Used for Back Cleansing | Powerful Cleansing: 14.54 oz./min (6-level adjustment by pulse method) at water supply pressure of 29 psi Mild Cleansing: 15 oz./min (6-level adjustment by pulse method) at water supply pressure of 29 psi |
| | | Amount of Water Used for Front Cleansing | 15 oz./min (6-level adjustment) at water supply pressure of 29 psi |
| | | Warm Water Temperature | Water temperature: Approx. 89.6°F to 104°F (6-level setting) |
| | | Heater Capacity | 1,240 W |
| | | Safety System | Thermal fuse, high temperature detection thermistor, flow rate sensor for prevention of no-water heating |
| | Bowl Spray | Amount of Sprayed Water (Spray Time) | 0.7 oz. (6 sec) at water supply pressure of 29 psi |
| | Warm Air Dryer | Air Flow Rate | 17.65 cf/min |
| | | Warm Air Temperature | Room temperature or approx. 104°F to 131°F (3-level setting) |
| | | Heater Capacity | 340 W |
| | | Safety System | Thermal fuse |
| | SpaLet Seat Heater | Surface Temperature*2 | Room temperature or approx. 82.4°F to 96.8°F (6-level setting) When advanced power save function is enabled: Room temperature or approx. 80.6°F to 86°F One-touch power save (8h) function is enabled: Room temperature |
| | | Heater Capacity | 45 W |
| | | Safety System | Thermal fuse |
| | Deodorizing Function | Deodorizing System | Chemical adsorption system using deodorant |
| | | Deodorizing Capacity | Discharge air flow rate: 3.17 cf/min, intake air flow rate: 4.94 cf/min When deodorizing function operates in Turbo mode: Discharge air flow rate: 3.17 cf/min, intake air flow rate: 6.3 cf/min |
| Remote Control | Dimensions | 264 mm in width x 33 mm in depth x 73 mm in height | |
| | Power | AA alkaline batteries: 2 | |

LIMITED WARRANTY

This SpaLet® comes with a three year warranty on all parts of the SpaLet. If inspection of this American Standard plumbing product, inclusive of the chinaware and all mechanical parts, confirms that it is defective in materials or workmanship, American Standard will repair or, at its option, exchange the product for the same or a similar model.

This limited warranty applies only to the original non-commercial purchaser and installation of the products. In the event of a limited warranty claim, proof of purchase will be required—save sales receipts.

For this warranty to become effective, the warranty registration process must be completed via the internet or telephone per the warranty registration instructions.

This limited warranty does not apply to commercial installations. The warranty for commercial installations is two years on the SpaLet.

This warranty does not apply to local building code compliance. Since local building codes vary considerably, the purchaser of the product should check with a local building or plumbing contractor to ensure local code compliance before installation.

This warranty will be void if the product has been moved from its initial place of installation; if it has been subjected to faulty maintenance, abuse, misuse, accident or other damage; if it was not installed in accordance with American Standard's instructions; or if it has been modified in a manner inconsistent with the product as shipped by American Standard. The warranty will be void if the product has failed as a result of worn-out of consumable parts such as packing, fuses, batteries.

WARNING: This warranty DOES NOT COVER any damages caused by the use of harsh cleaners. These products can seriously corrode the product components. This damage can cause leakage and property damage. American Standard will not be responsible or liable for any damage caused by the use of in-tank cleaners.

American Standard's option to repair or exchange the product under this warranty does not cover any labor or other costs of removal or installation including any costs of any surrounding material such as tile or marble. American Standard is not responsible for any other incidental or consequential damages attributed to a product defect. (Some states or provinces do not allow the exclusion or limitation of implied warranties, so this exclusion may not apply to you.)

This warranty gives you specific rights. You may have other statutory rights that may vary from state to state or province to province, in which case this warranty does not affect such statutory rights.

How to register the warranty:

PLEASE COMPLETE AMERICAN STANDARD WARRANTY REGISTRATION AND SAVE THIS WARRANTY INFORMATION.

IMPORTANT: Registration of the SpaLet must be completed for this warranty to become effective. Your registration will make it easier to service your product.

INSTRUCTIONS: Register your SpaLet at www.americanstandard.com. Please save your point of purchase (sale receipt).

IF YOU HAVE ANY QUESTIONS, OR PARTS ARE DAMAGE OR MISSING, DO NOT CONTACT, OR RETURN, THIS PRODUCT TO THE STORE. CONTACT CUSTOMER SERVICE.

American Standard Brands
One Centennial Avenue
Piscataway, New Jersey 08854
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902
www.americanstandard.com

How to register the warranty:

PLEASE COMPLETE AMERICAN STANDARD WARRANTY REGISTRATION AND SAVE THIS WARRANTY INFORMATION.

IMPORTANT: Registration of the SpaLet® must be completed for this warranty to become effective. Your registration will make it easier to service your product.

INSTRUCTIONS: Register your SpaLet at www.americanstandard.com. Please save your point of purchase (sale receipt).

IF YOU HAVE ANY QUESTIONS, OR PARTS ARE DAMAGE OR MISSING, DO NOT CONTACT, OR RETURN, THIS PRODUCT TO THE STORE. CONTACT CUSTOMER SERVICE.

American Standard Brands
One Centennial Avenue
Piscataway, New Jersey 08854
Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902
www.americanstandard.com

*American
Standard*

GCW-1385(19010)

PART OF **LIXIL**