

**NEVER LEAVE THE HEATER
UNATTENDED WHILE BURNING!**

PARTS LIST

KEY NO.	DESCRIPTION	PART NO.			
		DFA45	DFA65	DFA120	DFA170T
1	Fuel Tank Assembly	280-1004-02	280-1004-02	280-1004-01	280-1004-00
2	Fuel Gauge	282-1001-01	282-1001-01	282-1001-00	282-1001-00
3	Fuel Filter Assembly	287-4000-20	287-4000-20	287-4000-21	287-4000-21
4	Fuel Cap	282-2000-90	282-2000-90	282-2000-90	282-2000-90
5	Power Cord	140-9000-013	140-9000-013	140-9000-013	140-9000-013
6	Power Switch	110-9400-001	110-9400-001	110-9400-001	110-9400-001
7	Display P.C.B. Assembly	160-9200-072	160-9200-072	160-9200-027	160-9200-027
8	Thermostat Control Knob	-----	-----	-----	285-2103-00
9	Lower Shell	285-5103-00	285-5103-00	285-5104-00	285-5104-20
10	Air Line	578-5100-51	578-5100-51	287-5100-53	287-5100-53
11	Temperature Limit Control	154-9000-008	154-9000-008	154-9000-007	154-9000-007
12	Combustion Chamber	280-8000-02	280-8000-02	280-8000-01	280-8000-00
13	Photocell	FA1007	FA1007	FA1007	FA1007
14	Fuel Line	287-5100-50	287-5100-50	287-5100-52	287-5100-52
15	Photocell Assembly	126-9200-001	126-9200-001	126-9200-001	126-9200-001
16	Burner Head Assembly	Ref.	Ref.	Ref.	Ref.
16-1	Nozzle	FA1001	FA1002	FA1003	FA1004
16-2	Nozzle Seal Washer	-----	-----	285-8109-90	285-8109-90
16-3	Nozzle Seal Spring	-----	-----	285-8110-00	285-8110-00
16-4	Burner Head	284-7112-00	284-7112-00	284-7112-11	284-7112-10
16-5	Spark Plug	FA1008	FA1008	FA1009	FA1009
17	Motor and Pump Assembly	283-1000-42	283-1000-42	283-1000-41	283-1000-40
17-1	Motor	111-9000-985	111-9000-985	111-9000-984	111-9000-955
17-2	Pump Body	288-3100-00	288-3100-00	288-3100-00	288-3100-00
17-3	Rotor Kit	FA1000	FA1000	FA1000	FA1000
17-4	Blade	288-3100-60	288-3100-60	288-3100-60	288-3100-60
17-5	End Pump Cover	288-3100-10	288-3100-10	288-3100-10	288-3100-10
17-6	Filter Kit	FA1005	FA1005	FA1005	FA1005
17-7	Lint Filter	See 17-6	See 17-6	See 17-6	See 17-6
17-8	Output Filter	See 17-6	See 17-6	See 17-6	See 17-6
17-9	End Filter Cover	288-3100-40	288-3100-40	288-3100-40	288-3100-40
17-10	Plug/Pump Adj. Kit	FA1006	FA1006	FA1006	FA1006
17-11	Ball	See 17-10	See 17-10	See 17-10	See 17-10
17-12	Spring	See 17-10	See 17-10	See 17-10	See 17-10
17-13	Adj. Screw	See 17-10	See 17-10	See 17-10	See 17-10
18	Fan Assembly	283-1000-72	283-1000-72	283-1000-71	283-1000-70
19	Ignitor	158-9100-001	158-9100-001	158-9100-007	158-9100-009