
Installation instructions

Notice de montage

Instrucciones de montaje y uso

Actuator Plate

Plaque de commande

Pulsador

WD5008 011 090

WD5008 021 090

WD5008 031 090

	Important information	4
	Installation	5
	Remarques importantes	10
	Montage	11
	Información importante	16
	Montaje	17

en

fr

es



About these instructions

The installation instructions come as part of the Duravit product and must be read carefully prior to installation.

Target readership and qualifications

This is a professional grade product. A working knowledge of construction techniques and code compliant plumbing installation are required for proper installation and user satisfaction. The product must be installed by a licensed plumber.

Explanation of the key words and symbols



Inspection (e.g. for scratches)



Inspect for leaks and that all connections have a watertight seal



Indication of the length of time (e.g. 10 minutes)

> Action required

Safety instructions


Product and/or property damage

The breach of local and country-specific regulations and standards can cause damage to the product and/or property damage.

- > Observe the local installation regulations and any country-specific standards at all times.

Prior to installation

Please read the specification sheets prior to the installation. Specification sheets are available for download at www.pro.duravit.us.

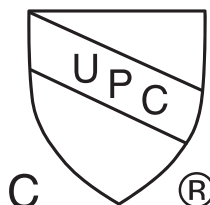

Products are in compliance with the latest editions of:

- Uniform Plumbing Code (UPC®)
- National Plumbing Code of Canada
- ASME: A112.6.2, A112.19.5, A112.1002, A112.18.6
- ANSI Z124.4
- CSA: B125.12, B125.6
- ANSI/ASSE 1002
- IAPMO PS-50
- UNAR / UNAR-HET
- State of Massachusetts listed
- This concealed tank is WaterSense® listed or compliant when used in combination with listed Duravit toilet bowls.




Warranty:

Find our General Terms and Conditions (GTC) at www.pro.duravit.us/gtc.




Delivery contents

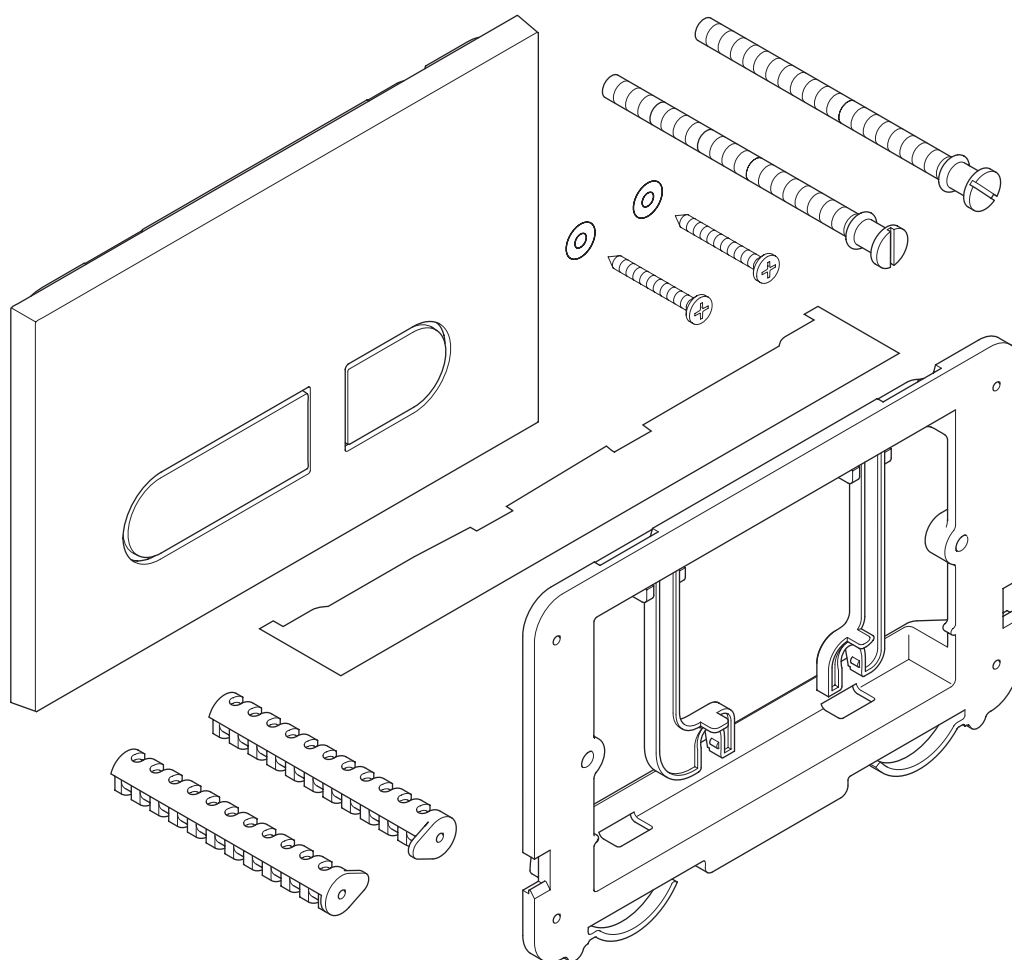


WD5008 011 090
 # WD5008 021 090
 # WD5008 031 090




en

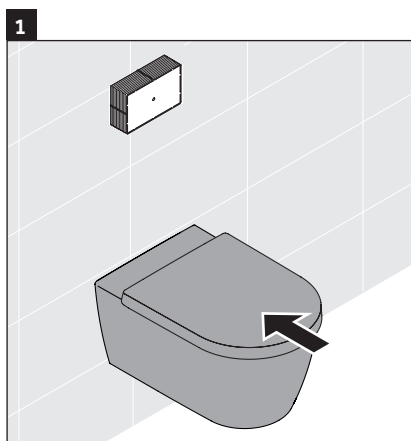


- > Complete install of wall-mounted toilet bowl.

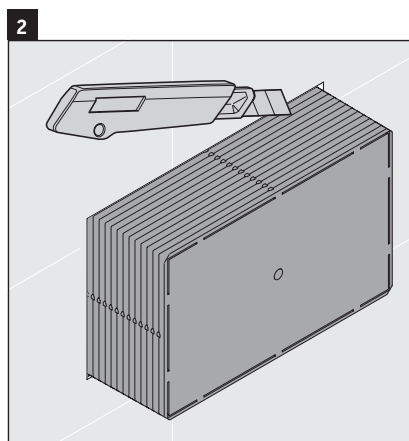


- > Remove the actuator protective cover using a box-cutter along the perforated edge that is flush to the finished wall.

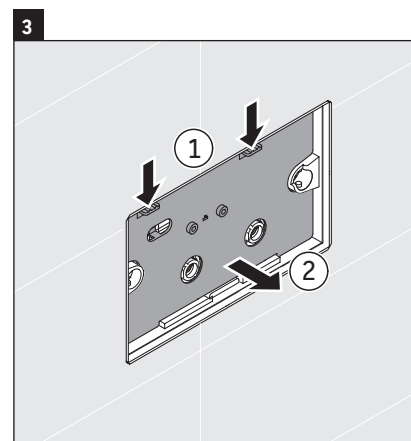


- > Press the cover release buttons at the top inserts to remove the actuator cover and expose the inner mechanism.

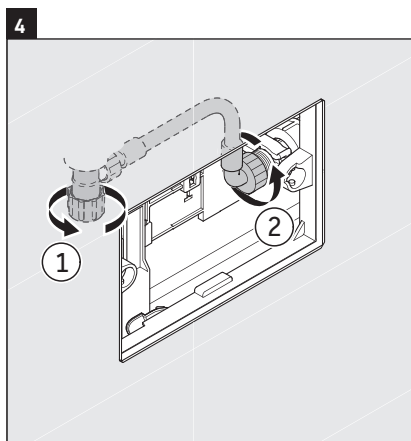


- > Close angle stop.
- > Disconnect the supply line from the fill valve.

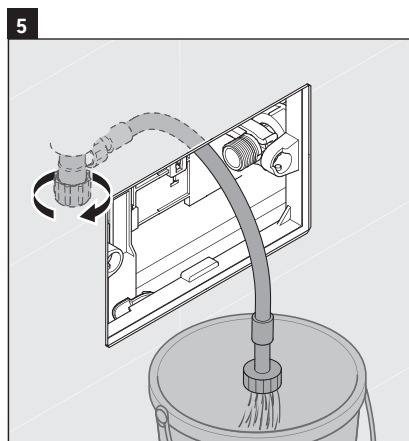


- > Run the supply hose to a bucket.
- > Turn on angle stop to flush out line of debris.

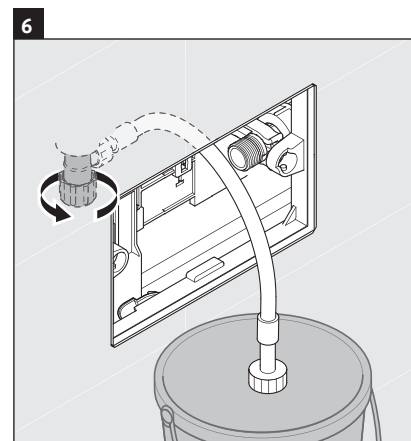


- > Turn angle stop off once line is sufficiently flushed.

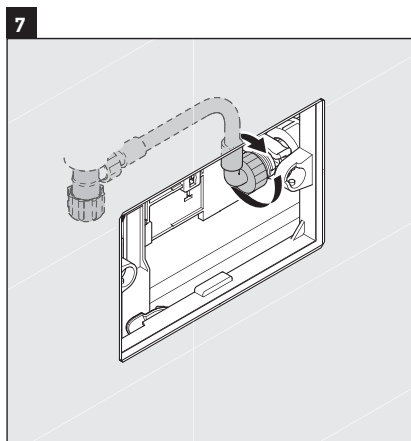


- > Reconnect supply line to fill valve.

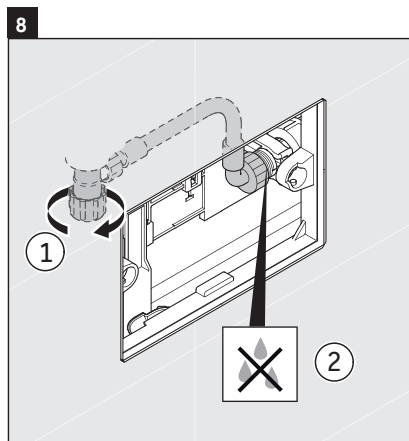

- > Turn on supply line.
- > Ensure no leaks are present.

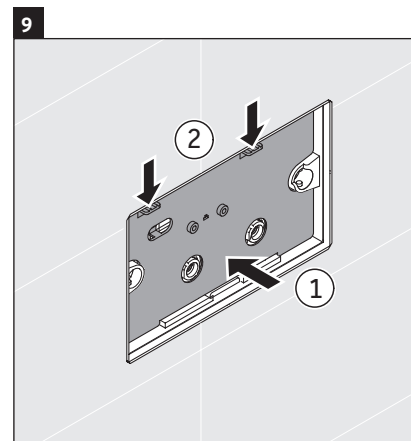


- > Reinstall actuator inner cover plate.

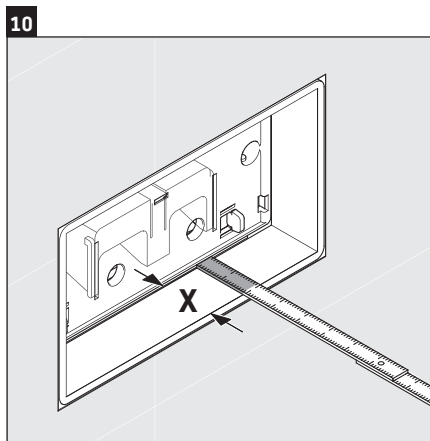

- > Measure the depth of the finished wall to the inner cover plate.

X	A B C
5/8" – 1 3/8"	A
1 3/8" – 2 3/4"	B
2 3/4" – 3 1/8"	C


- > Cut the flush rods to the appropriate length at perforation using the X measurement
- > Refer to above chart.

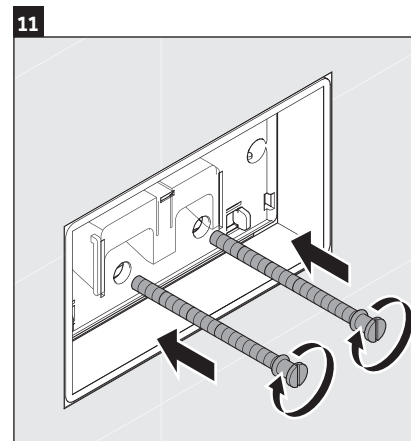


- > Install flush rods.




en

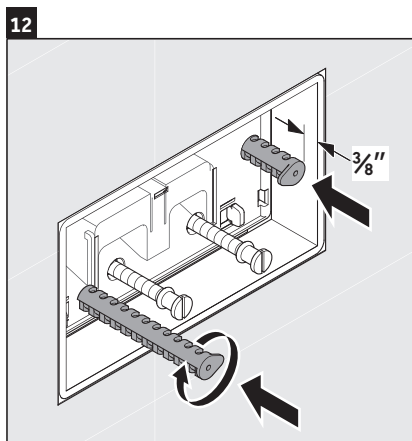


- > Install plate locking rod set at a depth of $\frac{3}{8}$ " from the finished wall.

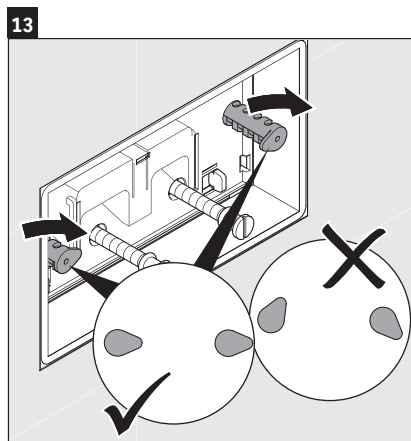


- > Set rod end points as to above diagram.
- > Check to ensure there are no leaks.

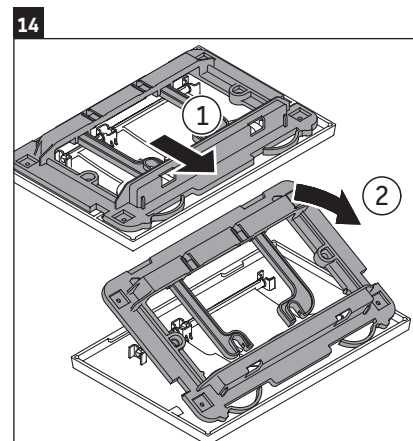


- > Remove plate mounting from the back of the actuator plate.

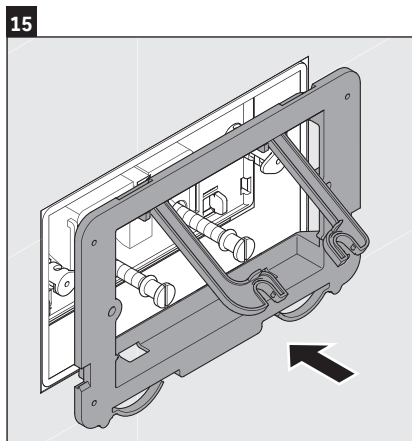


- > Position mounting frame onto actuator.

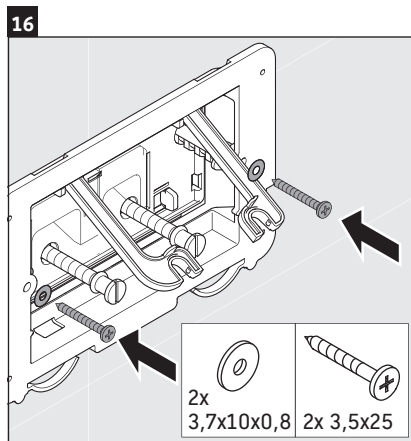


- > Secure mounting frame to wall using provided screws and washers.

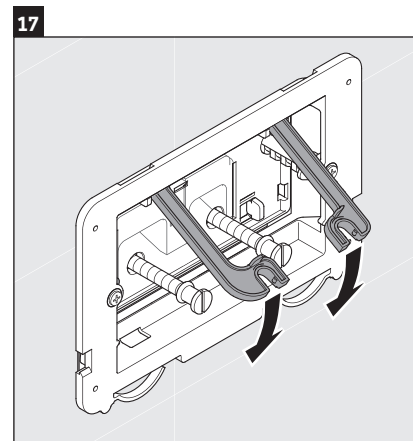


- > Position actuator hinges over rods to secure in place.

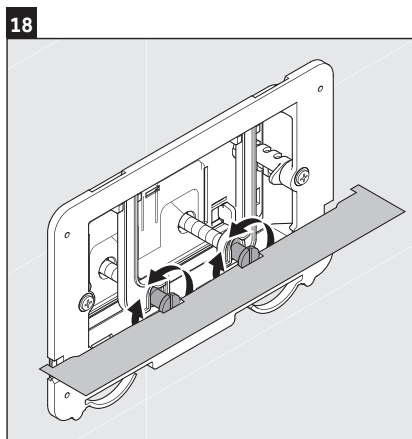

- > Use rod tool to ensure actuator rods are flush with the finished wall and level with each other.

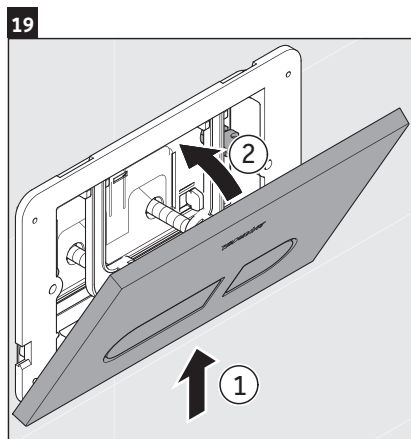

- > Reinstall actuator plate.

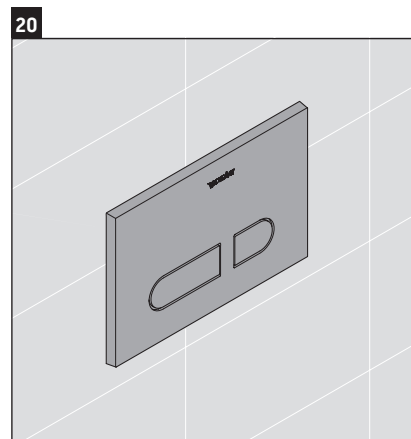

- > Inspect actuator plate to ensure it is secure and operating properly.