



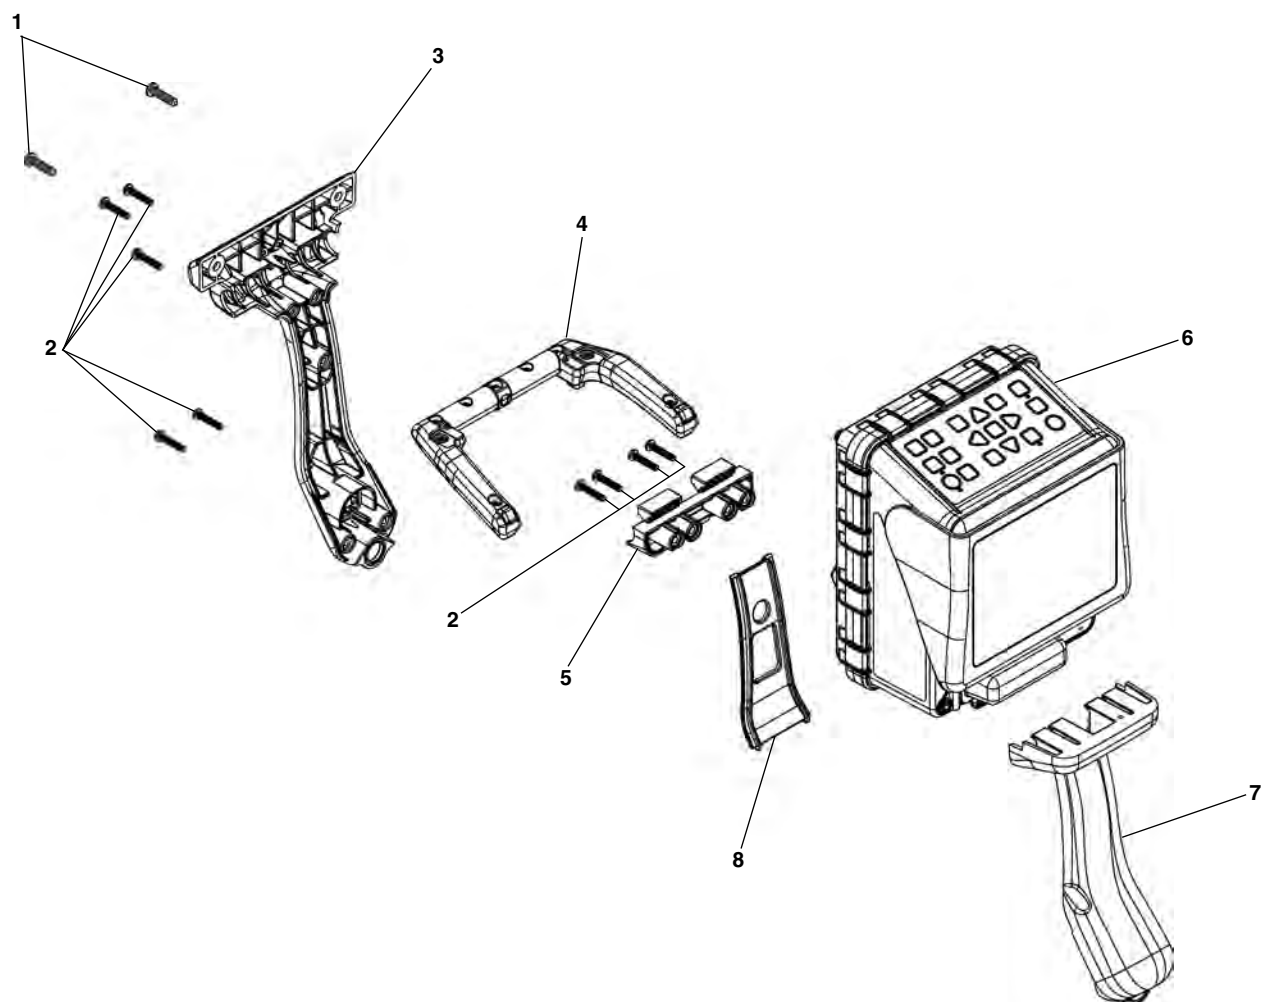

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description
1	50048	Screw, #8 x 3/4" (2)
2	24368	Screw, #6 x 3/4" (9)
3	49133	Bottom Handle
4	49148	Kickstand
5	49138	Handle Clamp
6	49078	Keypad
7	49153	Top Handle (Incl Handle Weight)
8	49143	Handle Insert

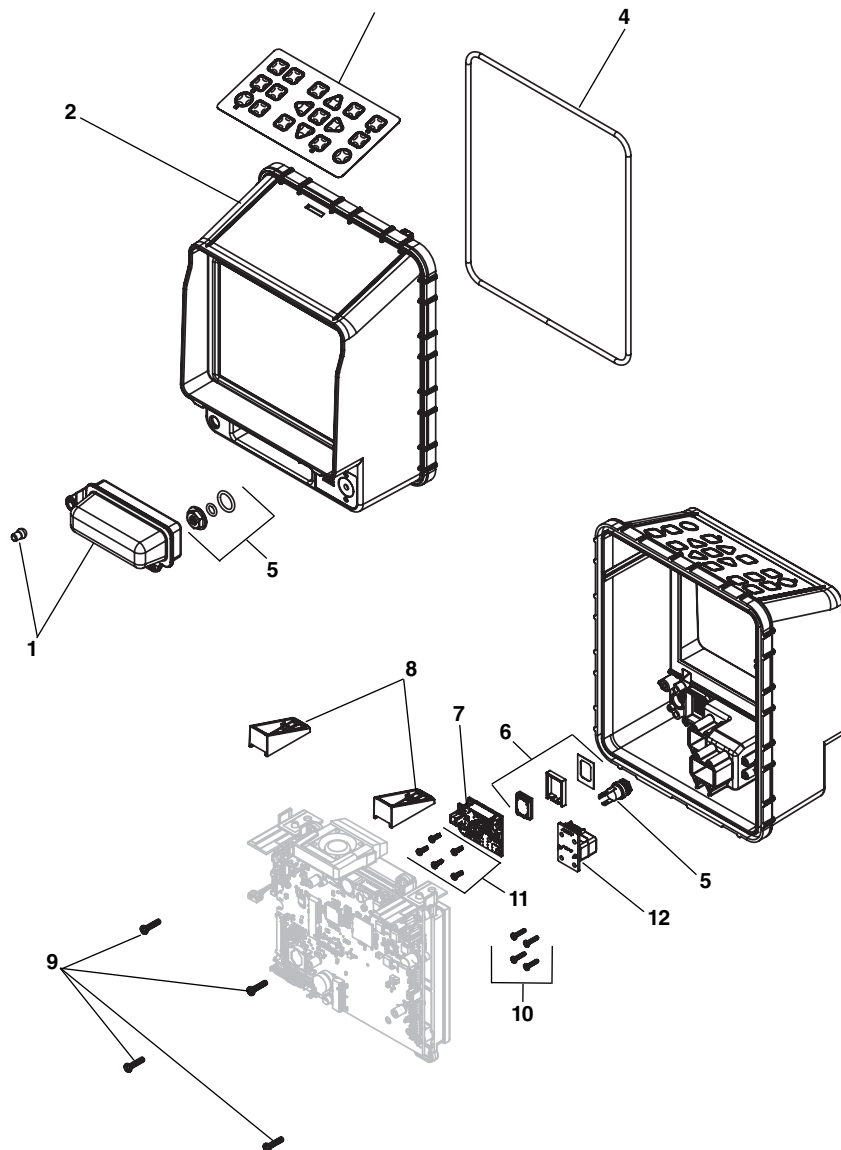

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description
1	49068	Front Connector Cover w/Pin
2	61423	Front Case (Less Keypad)
3	49078	Keypad
4	49083	Foam Seal
5	61413	DC Jack Asm
6	49088	Speaker Asm
7	49093	Audio PCB
8	60003	Wi-Fi Antenna Mount
9	49118	Screw, #4 X 1/2" (4)
10	52308	Screw, #2 X 3/8" (4)
11	32208	Screw, #2-28 X 1/4" (5)
12	59863	USB Connector PCB