


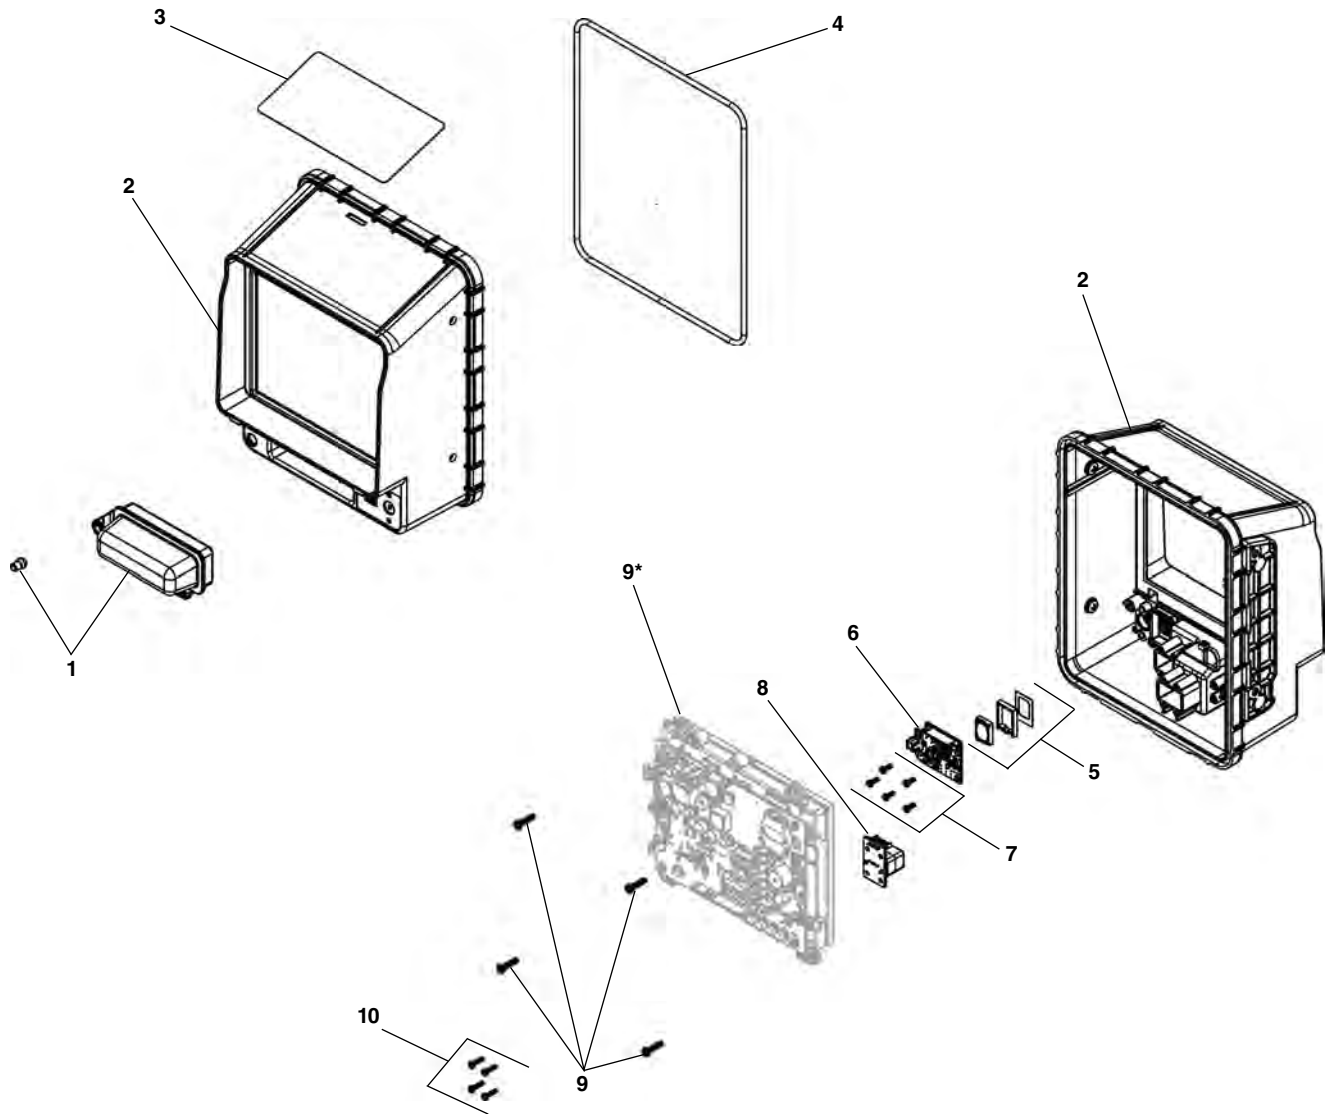

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description
1	49068	Front Connector Cover W/Pin
2	49073	Front Case (Less Keypad)
3	49078	Keypad W/Ribbon Cable
4	49083	Foam Seal
5	49088	Speaker Assembly
6	49093	Audio PCB
7	32208	Screw, #2 x 1/4" (5)
8	49103	USB Connector PCB
9	49118	Screw, #4 x 1/2" (4)
10	49123	Screw, #2 x 3/8" (4)

*Must Be Replaced By Factory Service Center.