

SWANSTONE

CORNER SOAP DISH

Model SS-7211 Installation • Care and Cleaning

Included In Carton






- A One Corner Soap Dish
- B One Tube of Caulk
- C One Tube of Adhesive

Surface Preparation

Surface must be dry, smooth, and free of any dirt, soap scum or other contaminants. Wipe surface with a damp cloth.

Cleaning

Use normal household detergents and cleansers. Just wiping the wall surfaces quickly removes water marks and residues. Occasional scrubbing with household abrasive cleansers ensures that the original luster is maintained, similar to tile and other permanent type bath fixture materials.

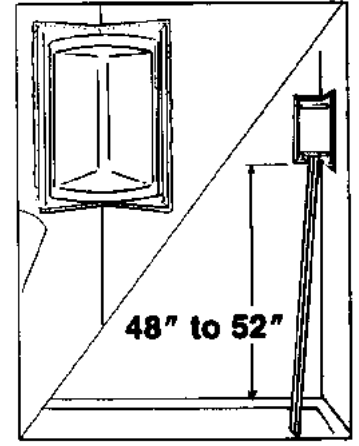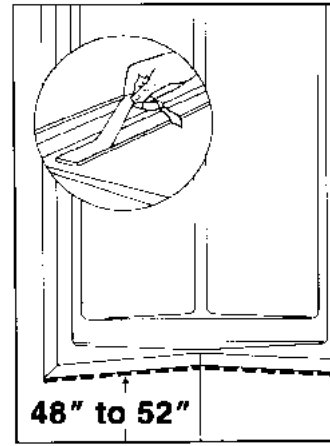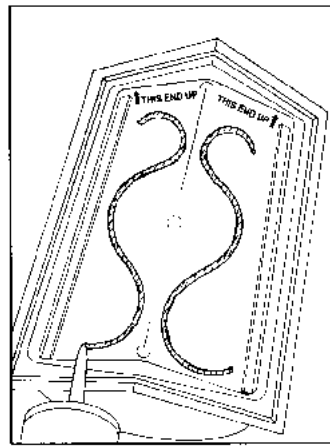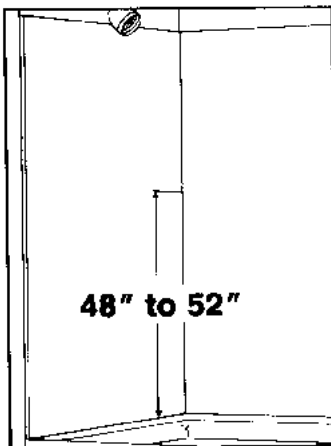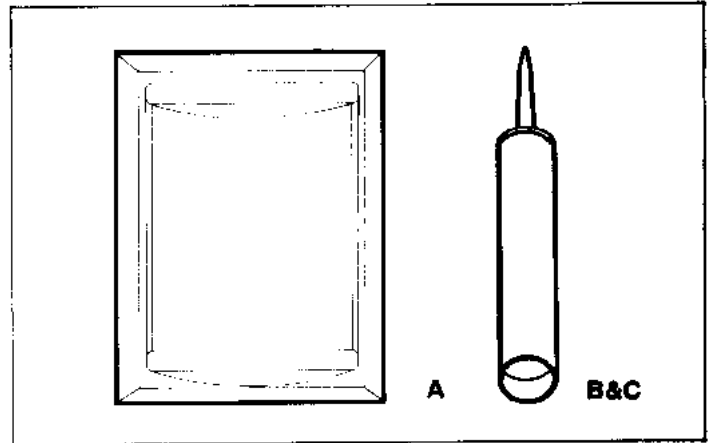

1. Select which corner you wish to locate your corner soap dish. For purposes of convenience, the manufacturer recommends you locate the corner soap dish in the corner nearest the shower head.

Measure up from the ledge of the shower floor 48" to 52" and make a mark on the wall in the desired corner. This is a recommended location of the bottom of the corner soap dish.

2. Apply a 1/8" bead of adhesive (supplied) as illustrated. Keep adhesive at least 1" away from factory applied pressure sensitive tape.

3. Remove backing from factory applied pressure sensitive tape.

NOTE: The back side of the corner soap dish is marked "THIS END UP." Properly position and locate. Press into place for a firm fit.

4. Read caulking instructions on the back of the tube of the caulk. Complete installation by caulking around all edges of the corner soap dish.
- NOTE:** Caulking applies white and dries clear within 48 hours.

NOTE: The weight of the corner soap dish may cause the corner soap dish to "sag" or "slip" down the shower panel. To prevent this, cut a length of board to support the corner soap dish until the adhesive has time to "set-up" (approximately 4 hours).